

MANUAL

RSC BOLTED - SPRINGS IN FRONT



**NEW STANDARD
IN RAIL ASSEMBLY**



© All rights reserved. FlexiForce®

ATTENTION! GENERAL WARNINGS!



To install, use and maintain this door safely, a number of precautions must be taken. For the safety of all concerned pay heed to the warnings and instructions given below! If in doubt, contact your supplier.




SPECIAL SAFETY WARNINGS OR REMARKS IN THIS MANUAL ARE INDICATED WITH THIS SYMBOL: READ THESE WARNINGS CAREFULLY.

- ✓ This manual has been written for use by experienced fitters and as such is not suitable for d.i.y. purposes or for use by trainee fitters.
- ✓ This manual describes the installation of the hardware set components, door sections (panels) and refers to installation manuals of the electrical operators. Be sure to supplement this manual if needed with instructions for any additional components not described in this manual.
- ✓ Before starting, read this manual carefully!
- ✓ Certain components may be sharp or have jagged edges. As such you are advised to wear safety gloves.
- ✓ All the components which have been supplied are designed for use with this specific overhead door. Replacement or adding additional components may have an adverse effect on the safety of, and the guarantee on, the door. Also the CE-approval which has been granted to this door combination will be cancelled when components are changed or installation is not done according to this manual! Installer is responsible for this.
- ✓ During tensioning, springs can exert large forces. Work carefully. Use the proper equipment. Ensure that you are standing in a steady position.
- ✓ Ensure that there is sufficient light during installation. Remove obstacles and dirt. Make sure that there is no one else present other than the fitters. Other people (children!) may get in the way or endanger themselves during the installation.
- ✓ Ensure that the building is constructed strong enough to carry the overhead door construction. It is the responsibility of the installing company to use fixing materials which are strong enough and equipped to fix the overhead door to the building.
- ✓ A power operated overhead door may not be equipped with a pull cord (rope). Be sure that this has been removed when a manual operated door is being equipped with an E-operator.
- ✓ Environments closed by an electrical operated overhead door with operators which are not disconnectable and where the door cannot be manual operated must be equipped with a pass door.
- ✓ Cutting of the bottom section is not allowed. The forces on cable break devices and bottom brackets are too high. Cutting is weakening the construction of the door on this critical point.


This door can only be taken into use, when all instructions are followed and:

- ✓ The installer has checked the combination of hardware, panel and e-operator as being approved and safe. Make sure to check the max. peak force and the proper functioning of the safety edge system in combination with the operator.
- ✓ All documentation has been handed over to the end-user: Ila Declaration of conformity, User Guide, Maintenance Instructions, Dismantling instructions, Service Log Book and this manual.
- ✓ A CE-identification plate has been placed on the door.
- ✓ User has been given instructions and demonstration of the proper use and functioning of the door.

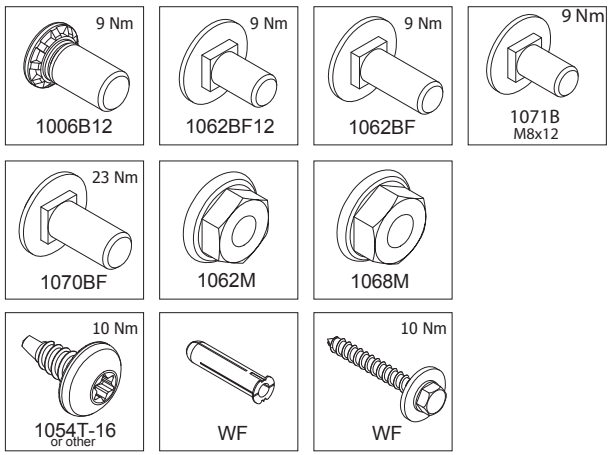


RSC-MNL-SFB-VL rev. 25-01-2020

1

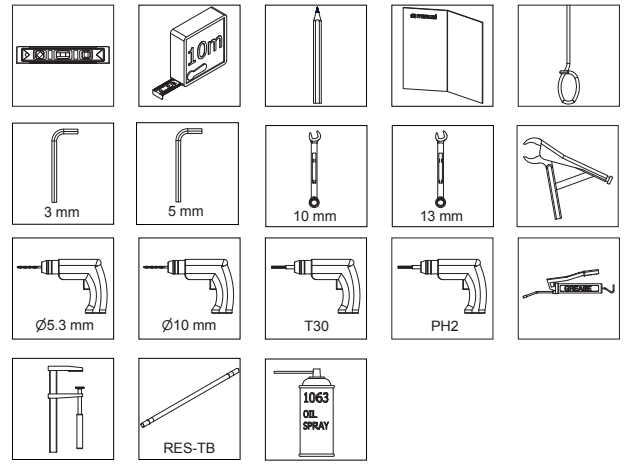


RSC-MNL-SFB-VL rev. 25-01-2020

2

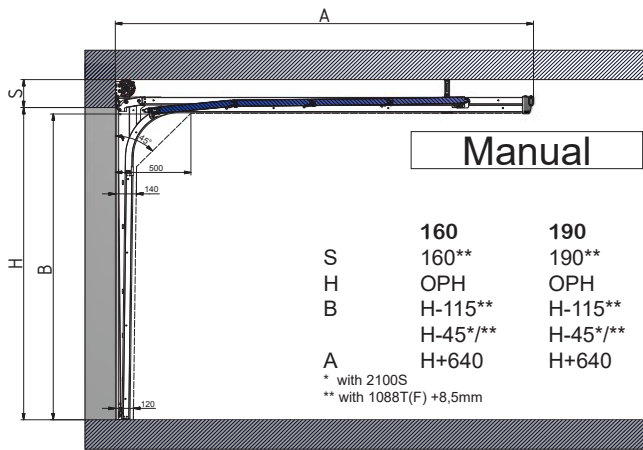


RSC-MNL-SFB-VL rev. 25-01-2020

3

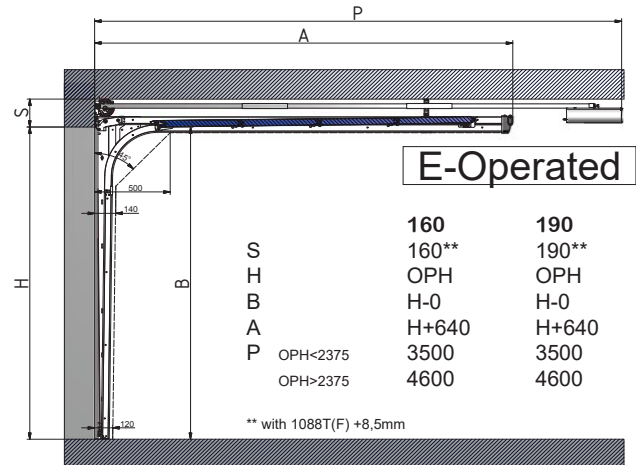

RSC-MNL-SFB-VL rev. 25-01-2020


4

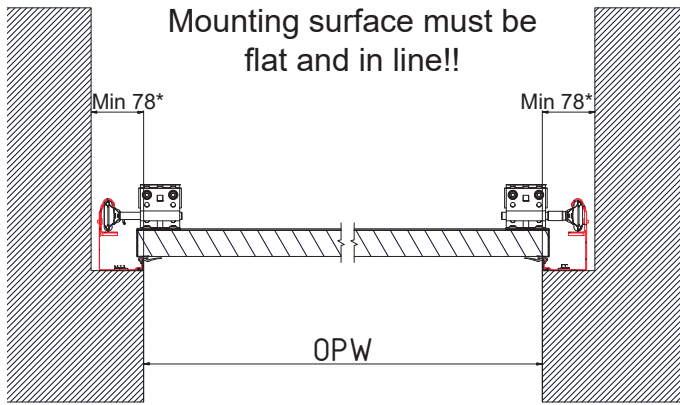

* with 1088T(F) +8,5mm

RSC-MNL-SFB-VL rev. 25-01-2020


5

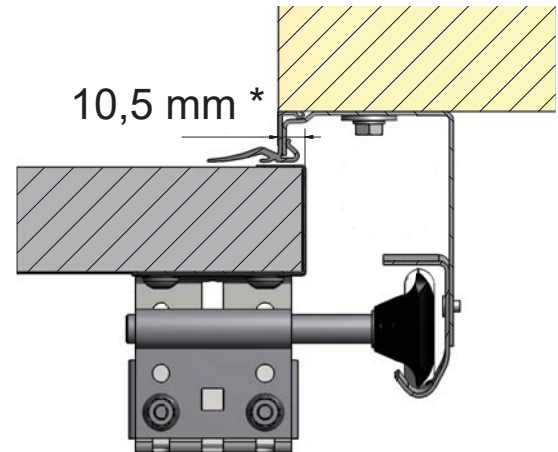

* with 1088T(F) +8,5mm

RSC-MNL-SFB-VL rev. 25-01-2020

6

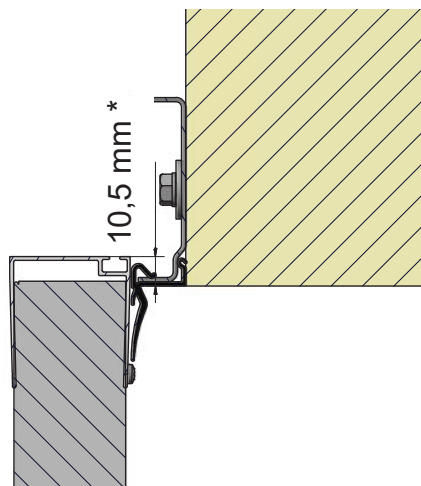


* with 1088T(F) +8,5mm

RSC-MNL-SFB-VL rev. 25-01-2020


7

Vertical Trackset

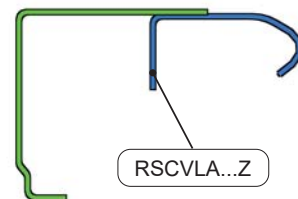


RSC-MNL-SFB-VL rev. 25-01-2020


8

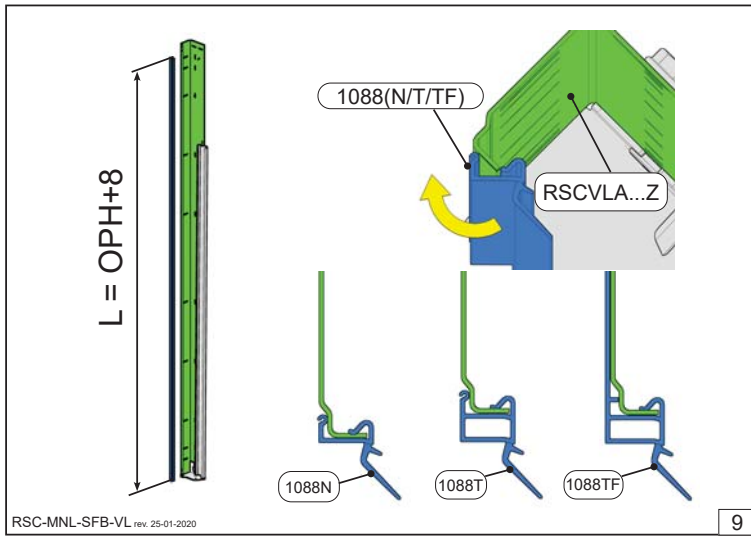


9

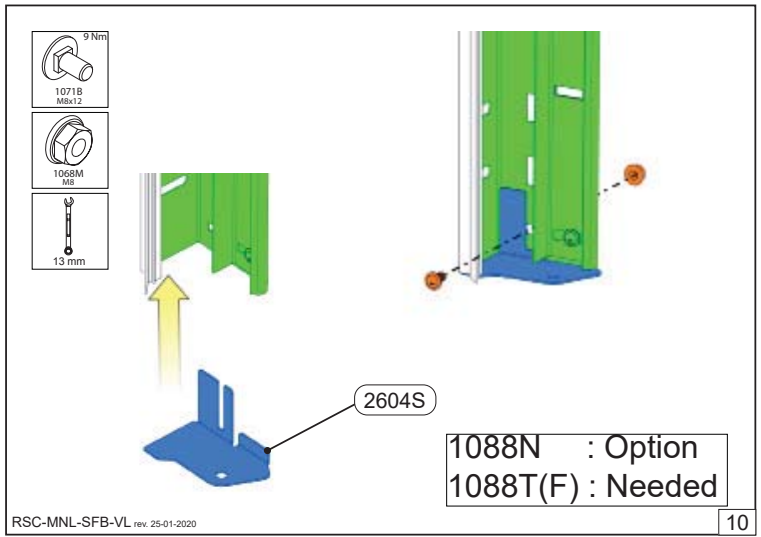


10

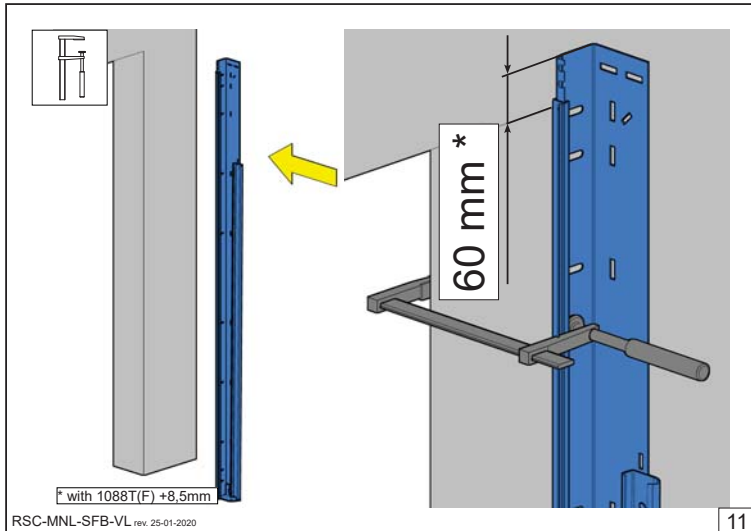


11

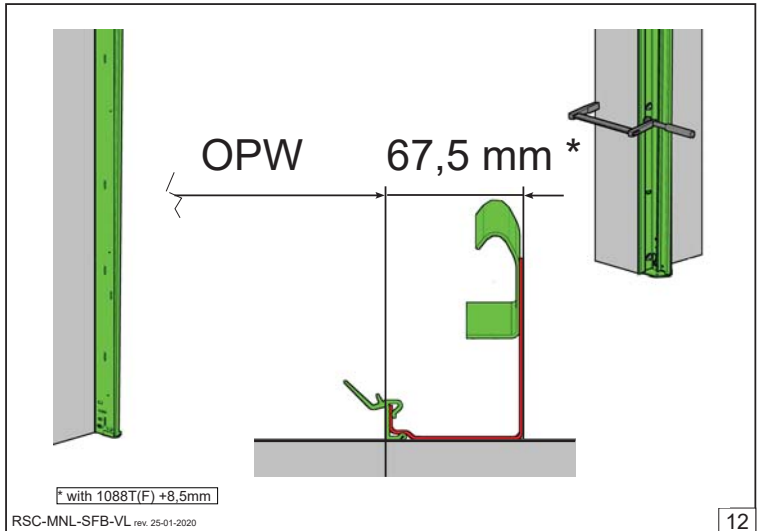


12

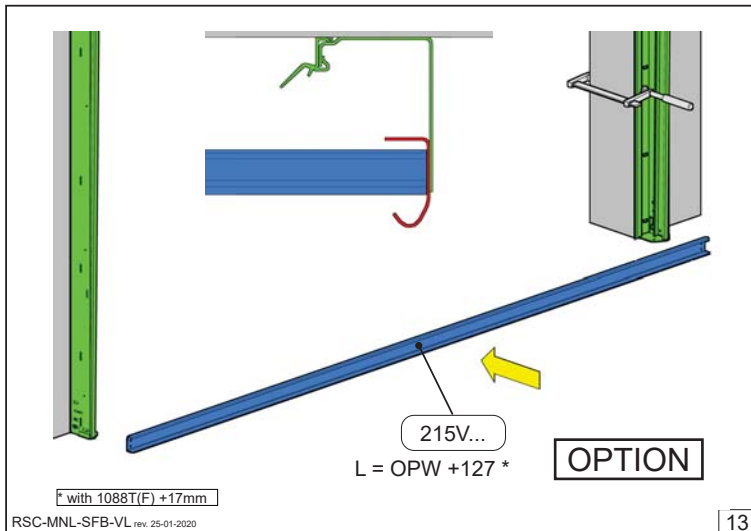


13

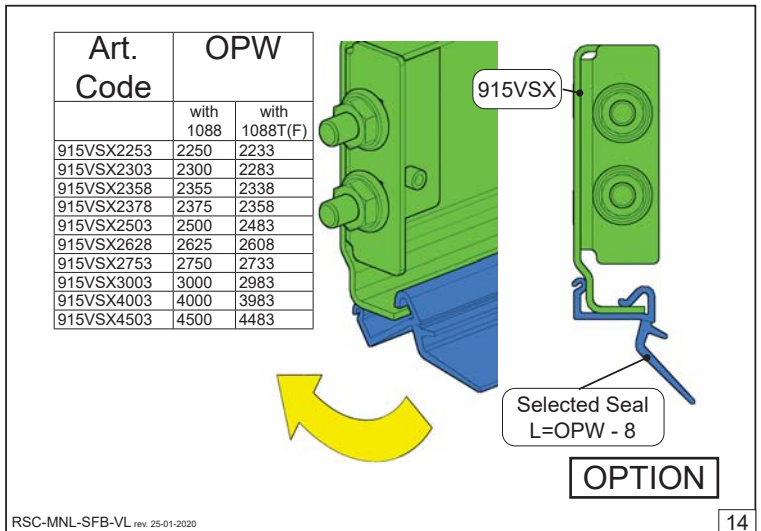









14

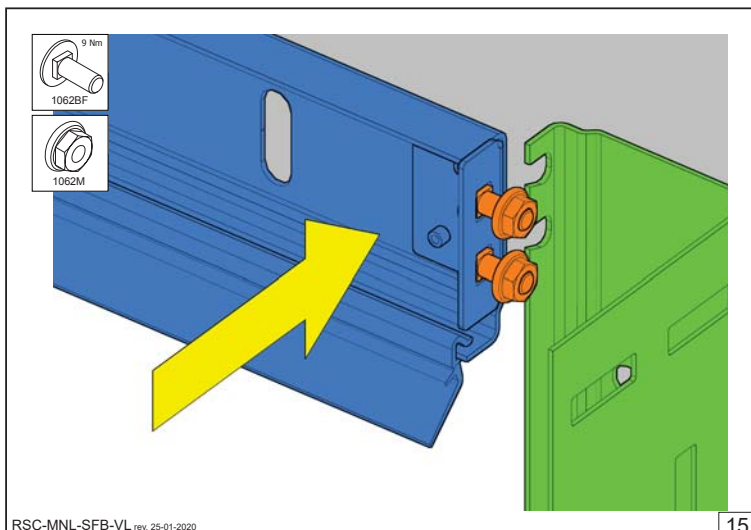


15

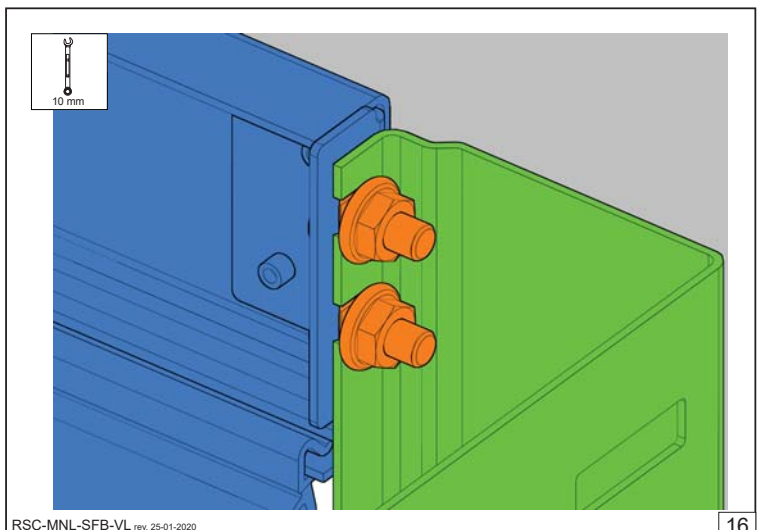


16

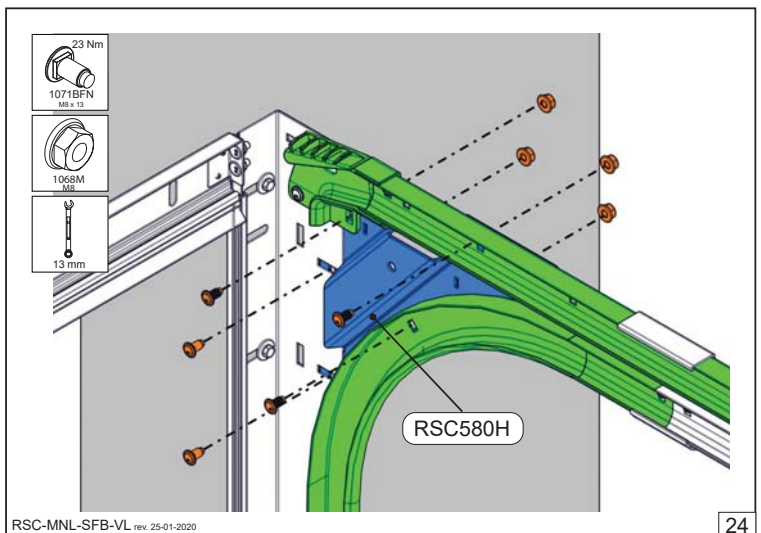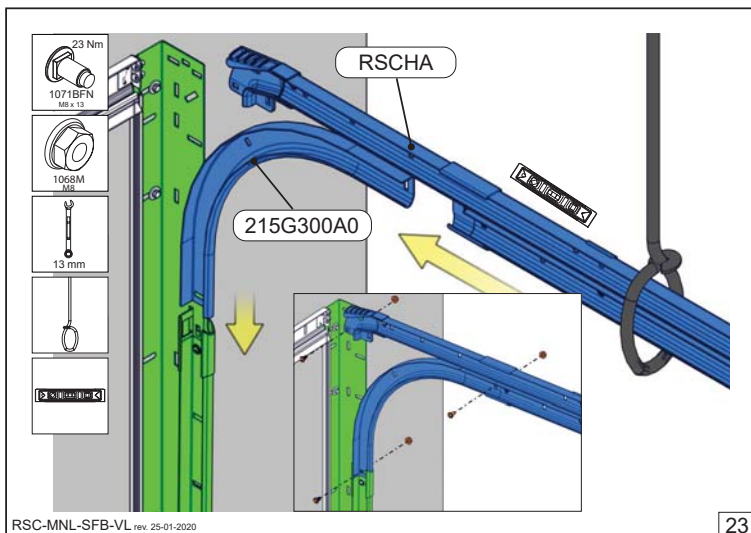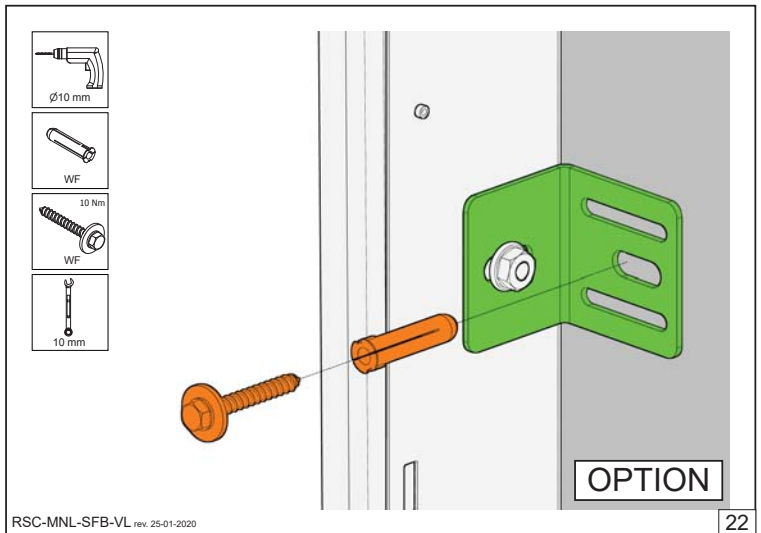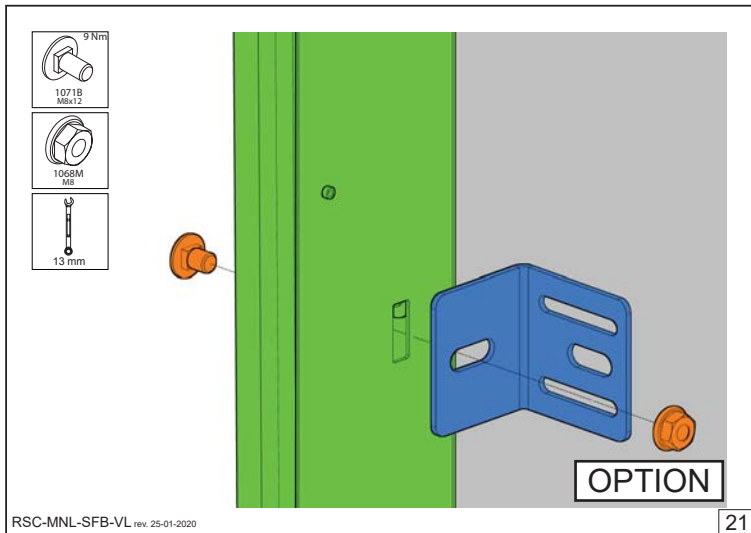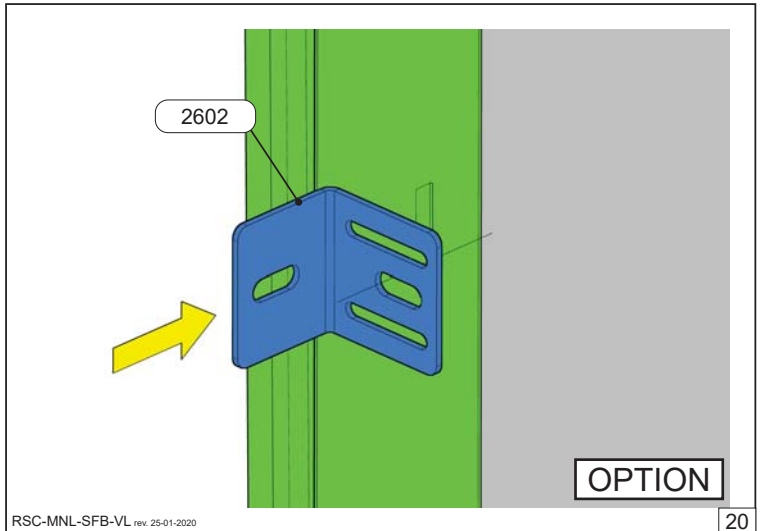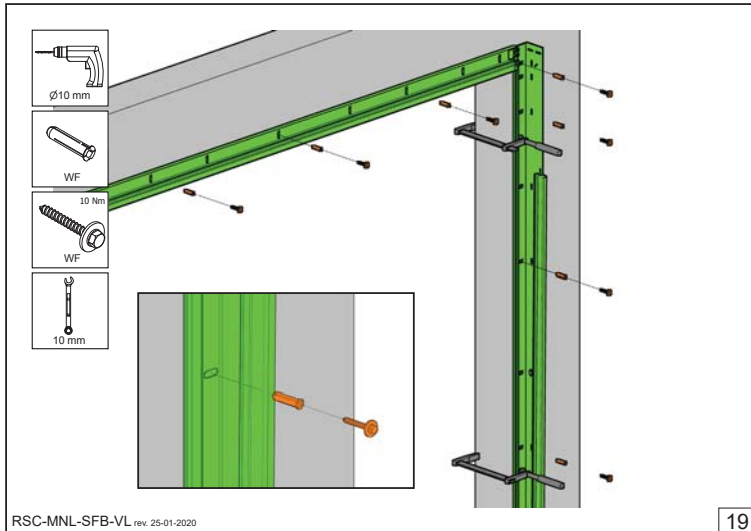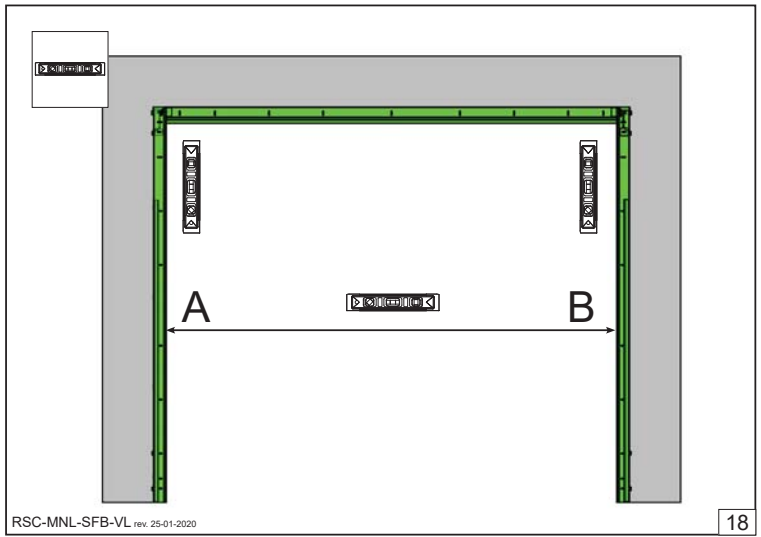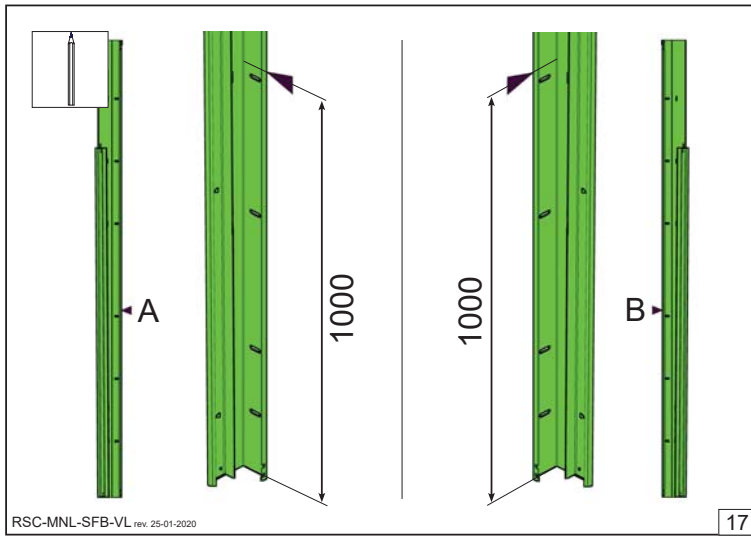

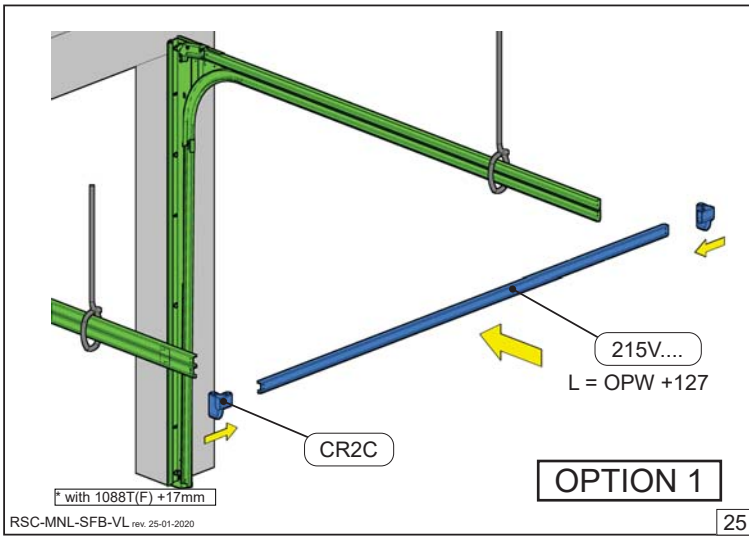


RSC-MNL-SFB-VL rev. 25-01-2020

25

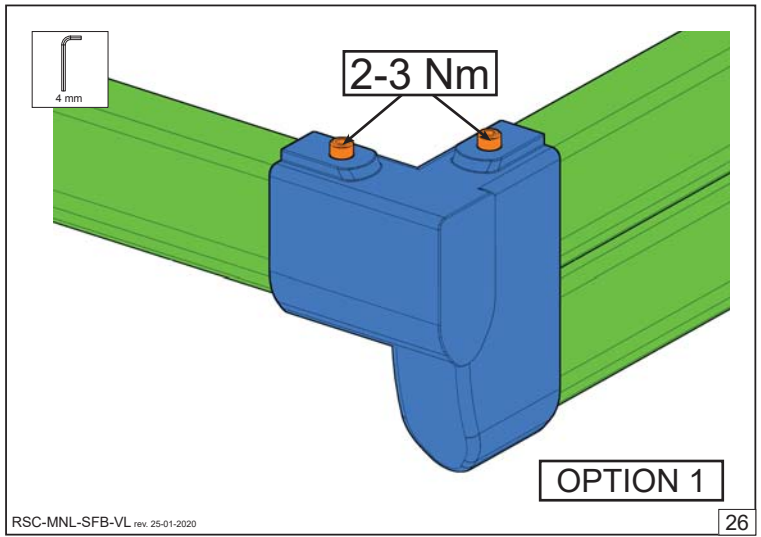


RSC-MNL-SFB-VL rev. 25-01-2020

26

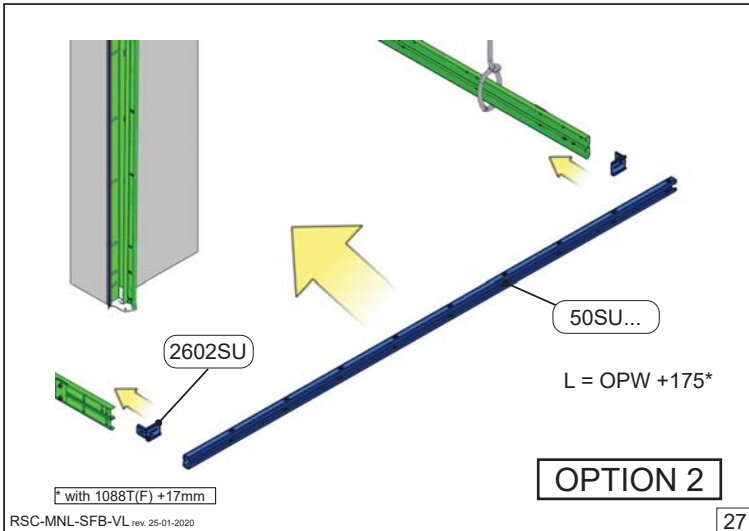


RSC-MNL-SFB-VL rev. 25-01-2020

27

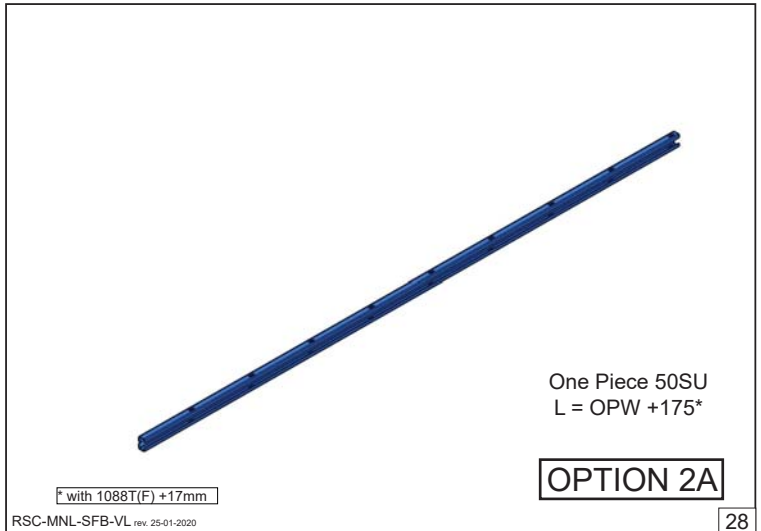


RSC-MNL-SFB-VL rev. 25-01-2020

28

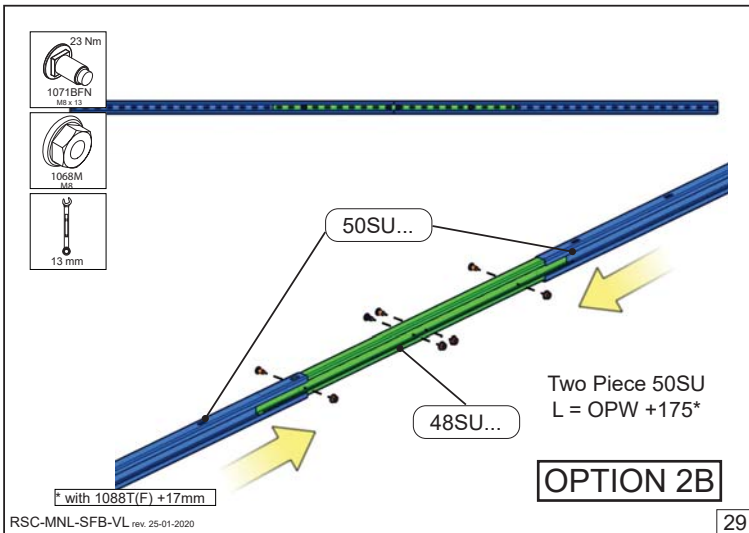


RSC-MNL-SFB-VL rev. 25-01-2020

29

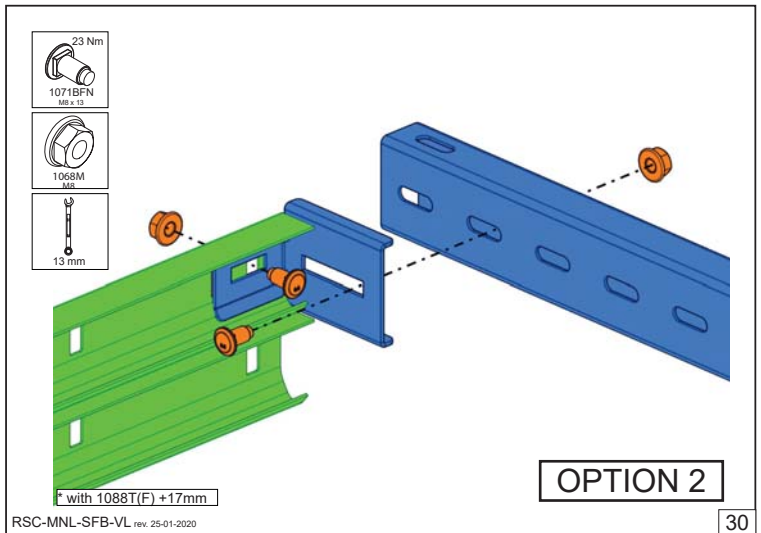


RSC-MNL-SFB-VL rev. 25-01-2020

30

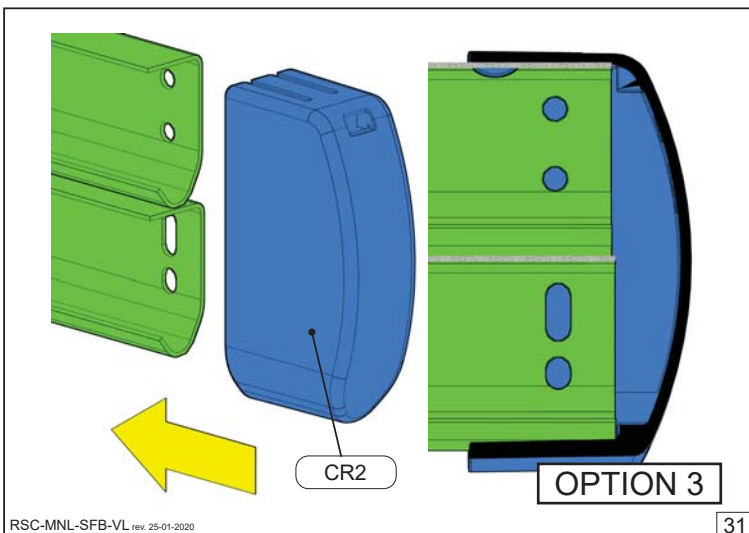









RSC-MNL-SFB-VL rev. 25-01-2020


31

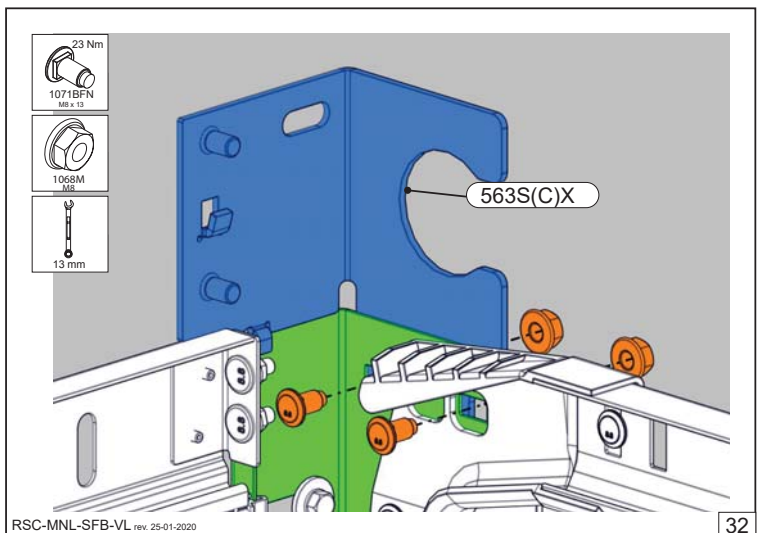


RSC-MNL-SFB-VL rev. 25-01-2020

32

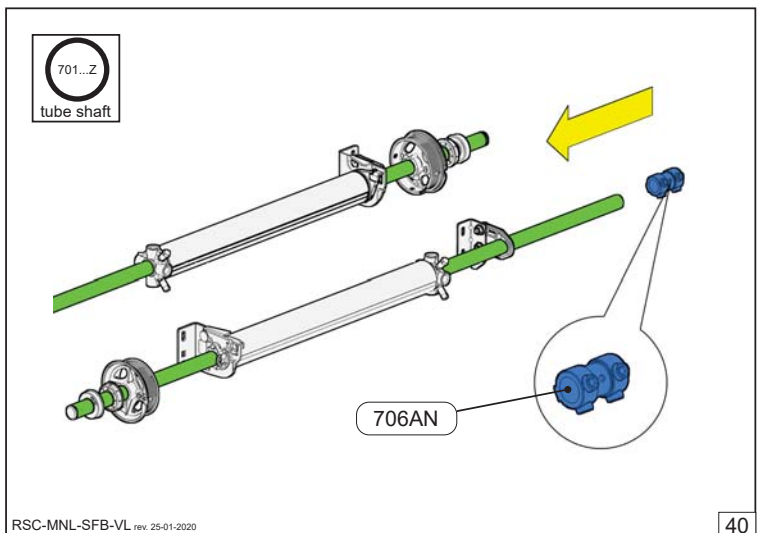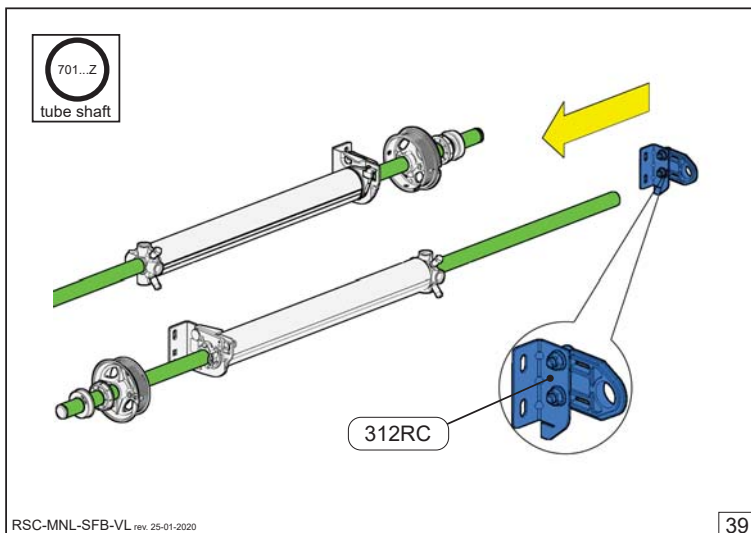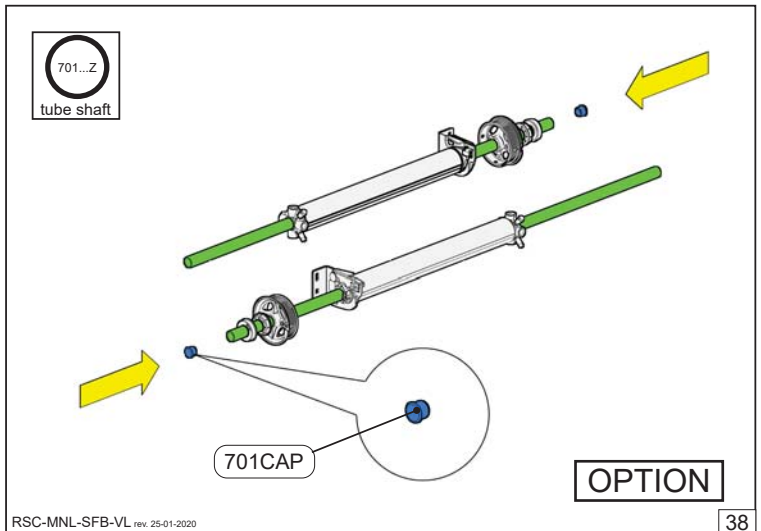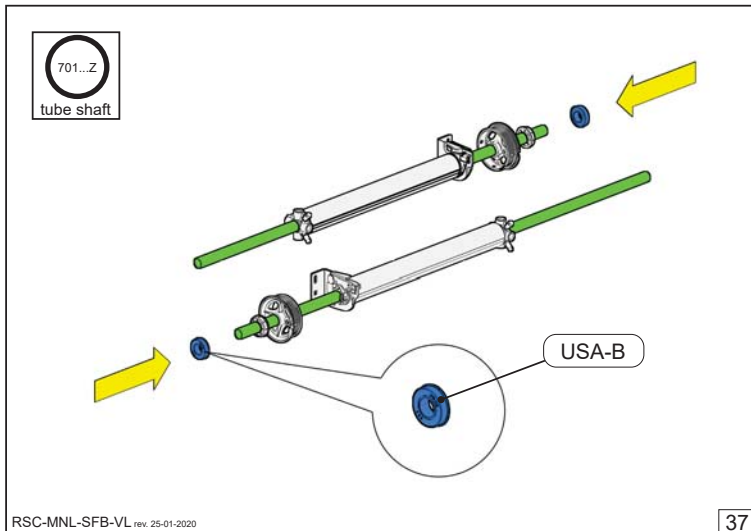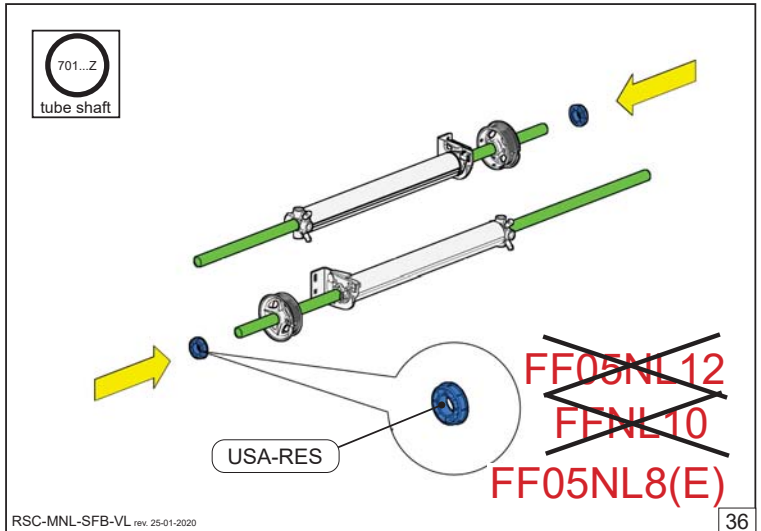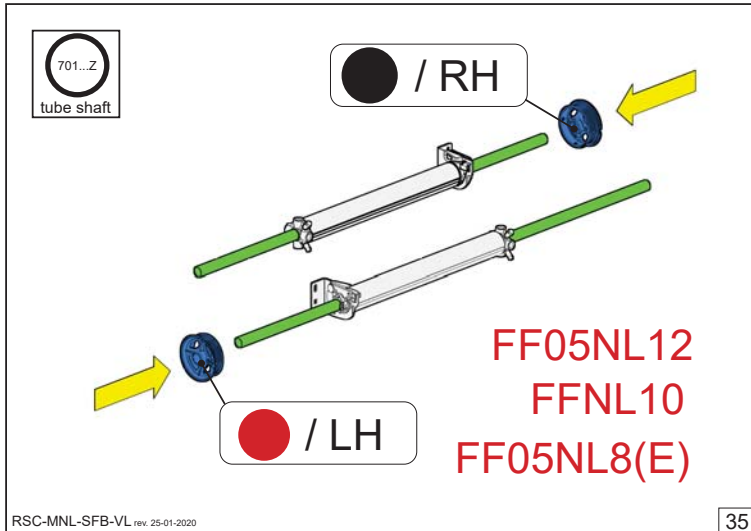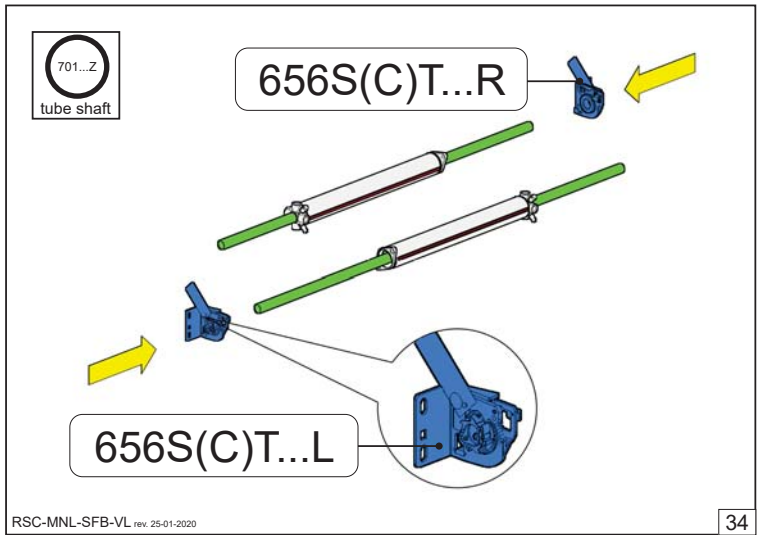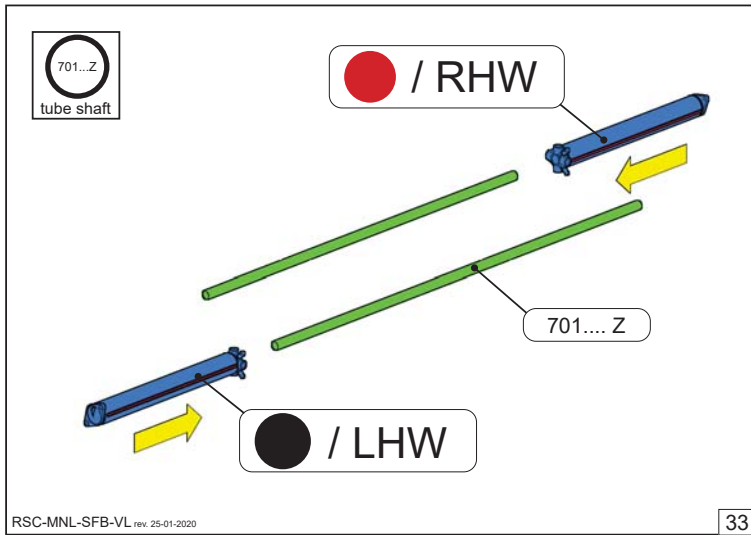


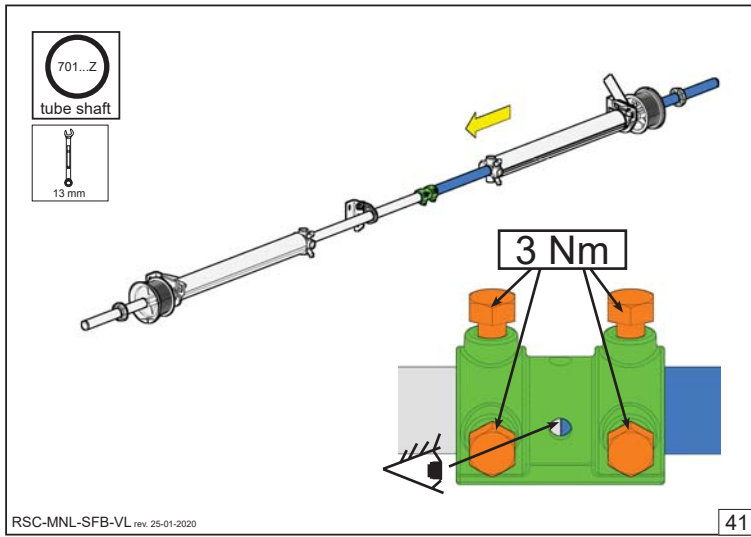


41

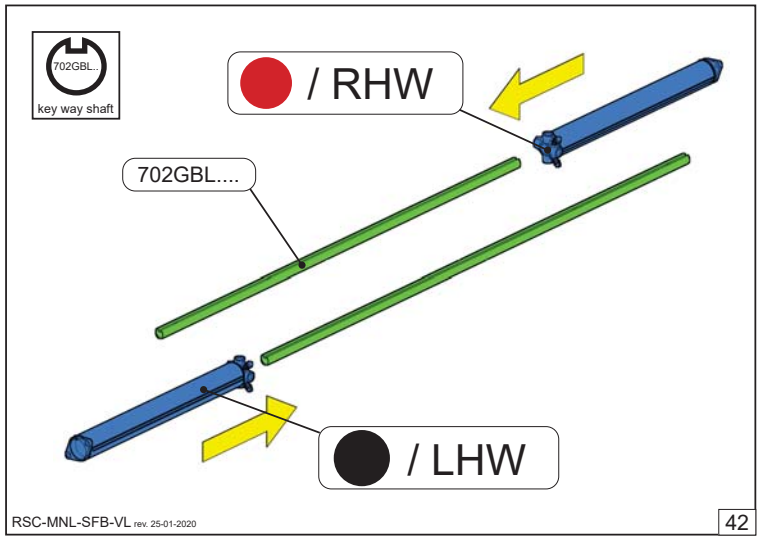


42

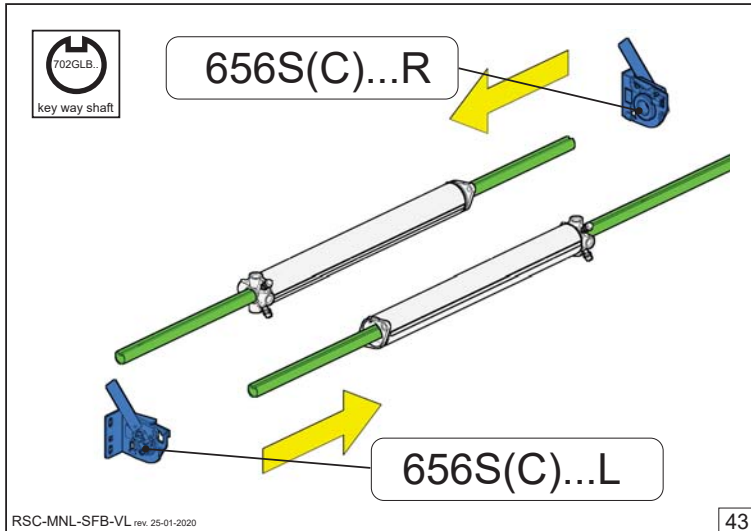


43

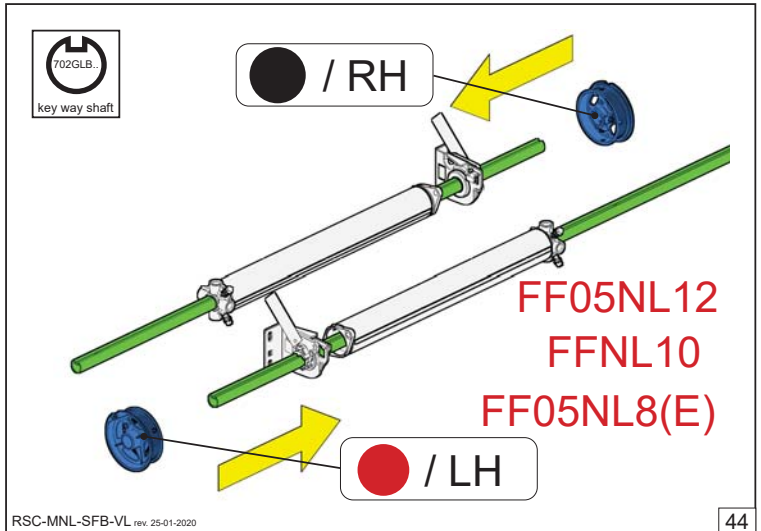


44

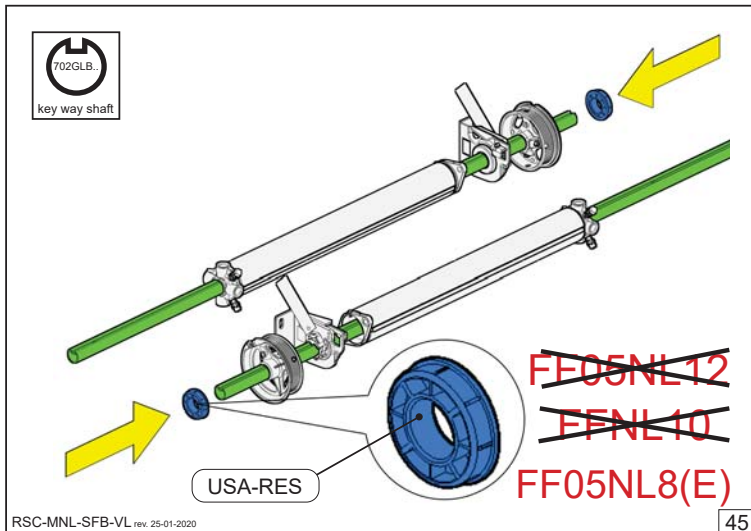


45

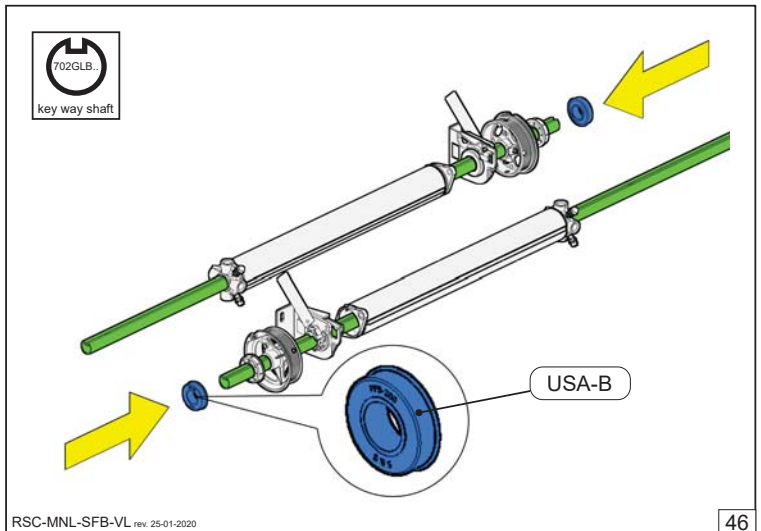


46

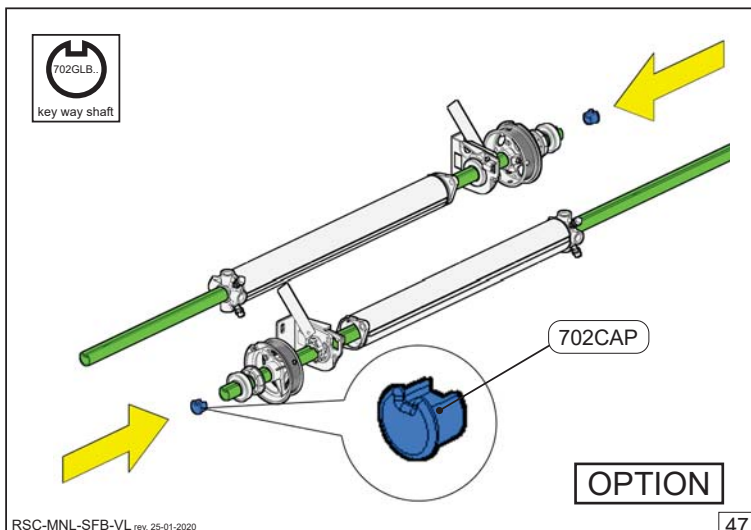


47

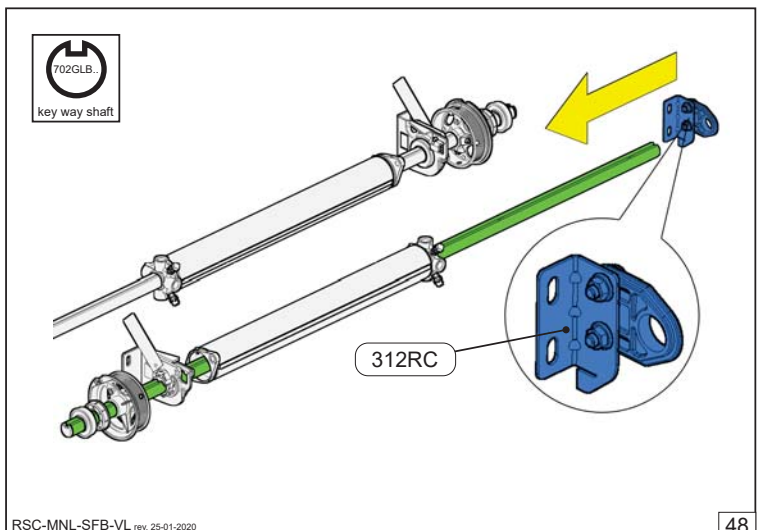


48

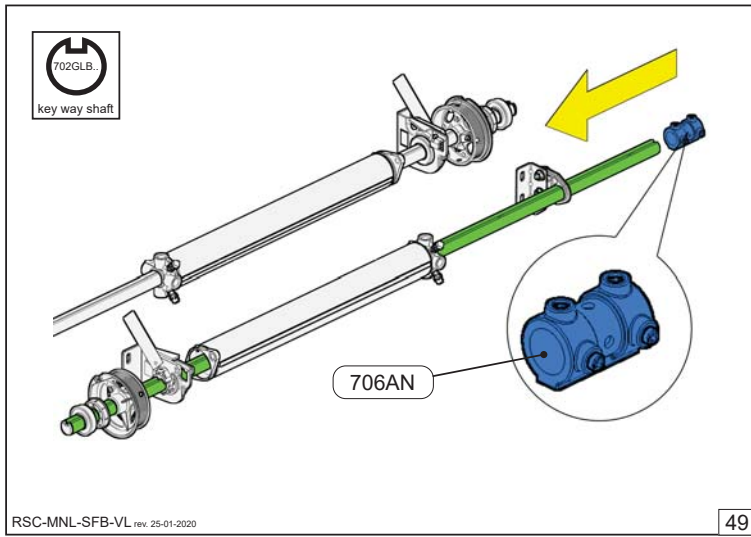


49

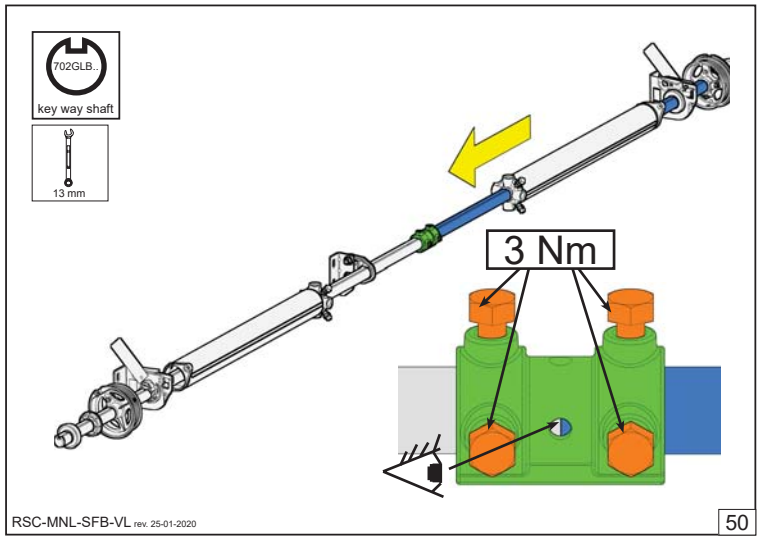


50

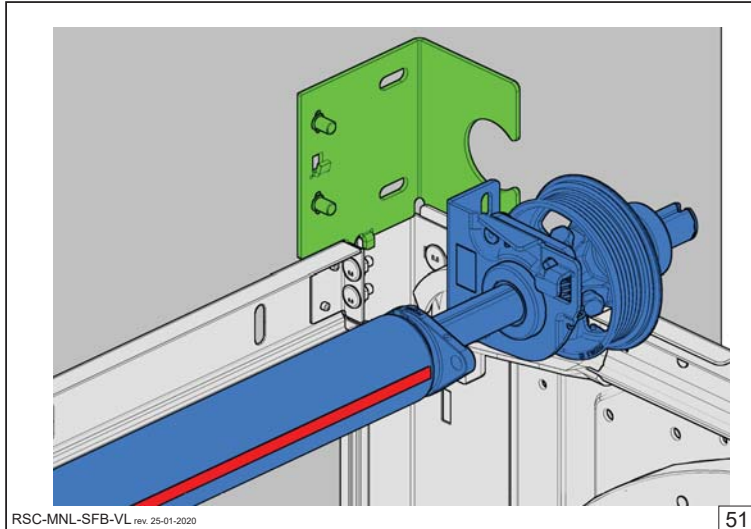


51

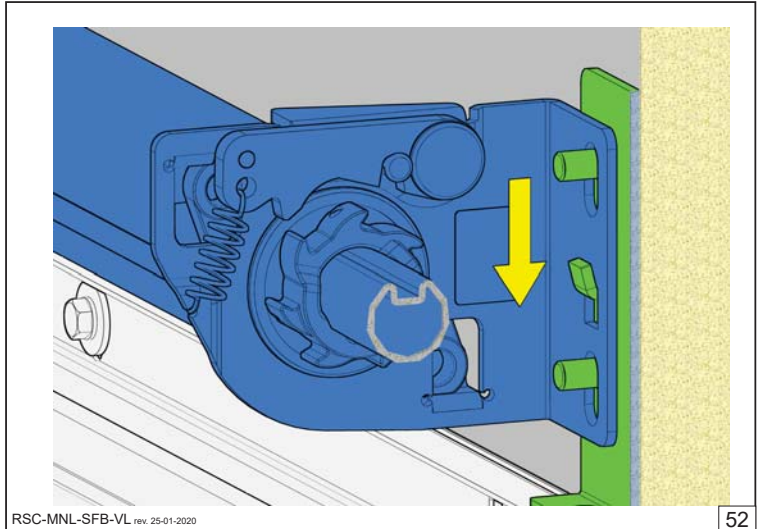


52

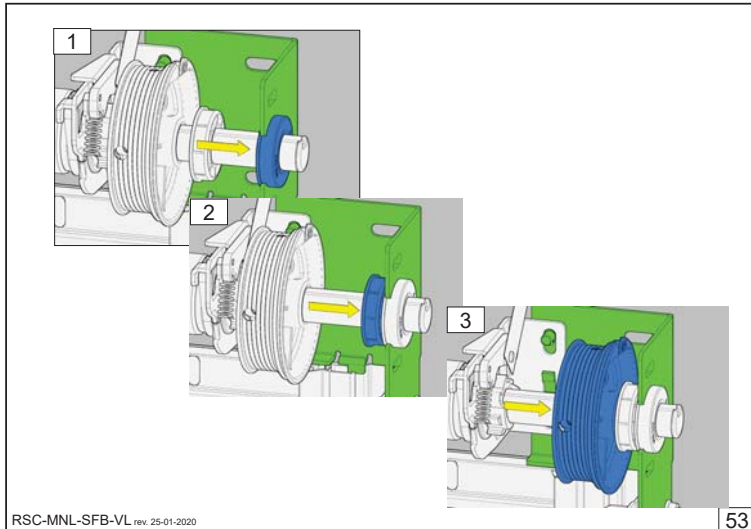


53

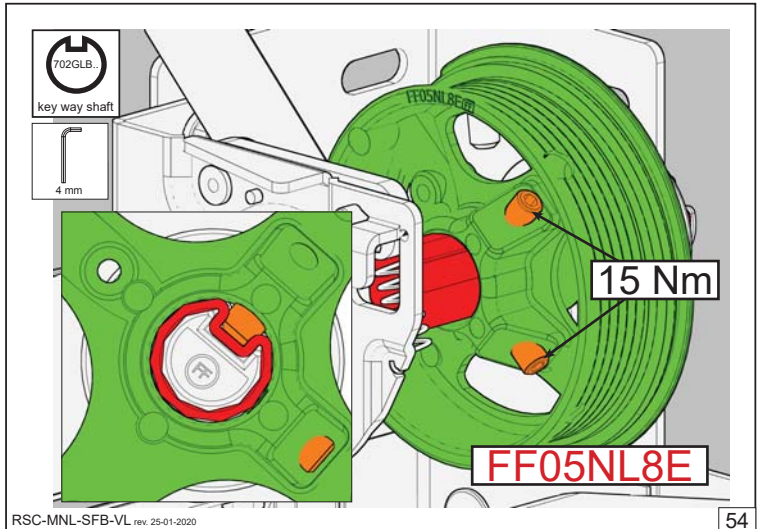









54

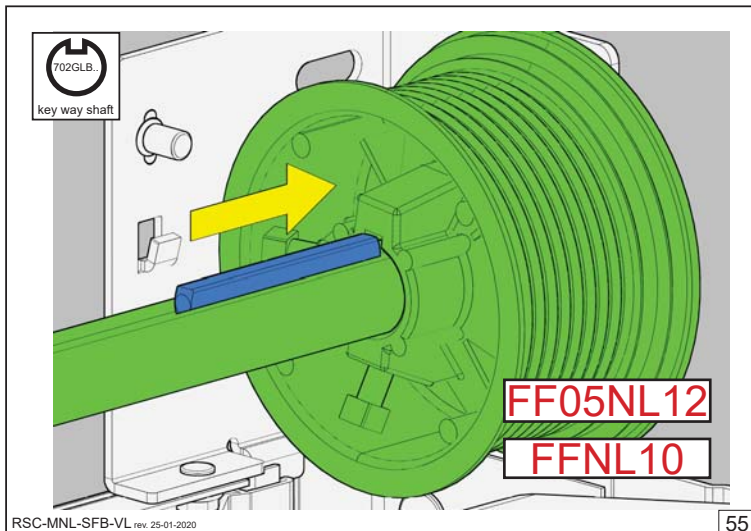


55

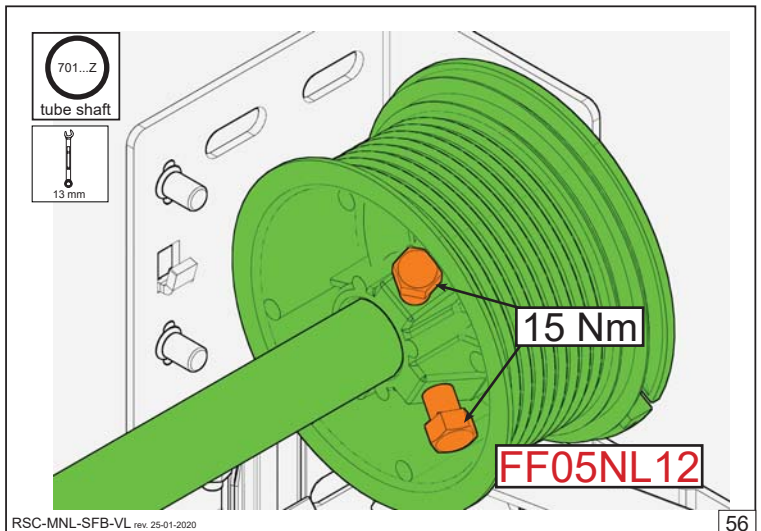


56

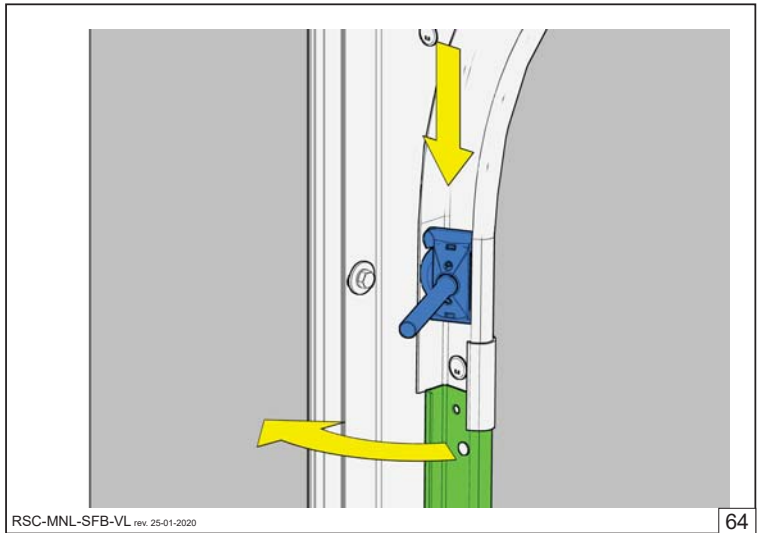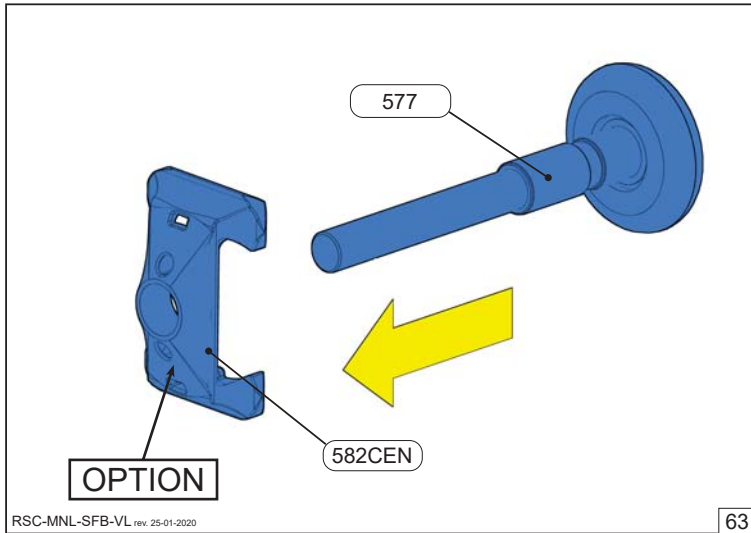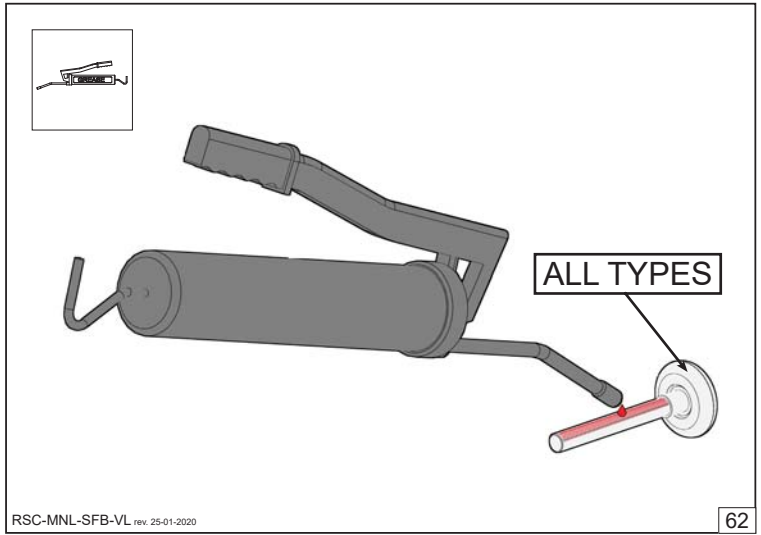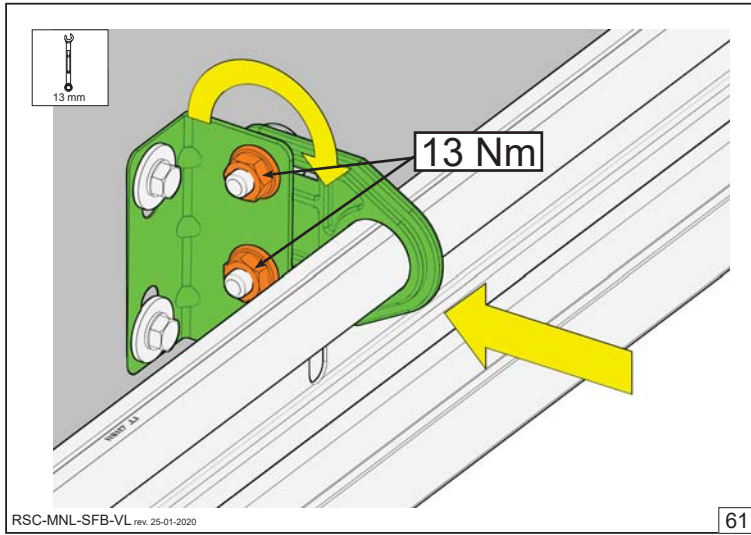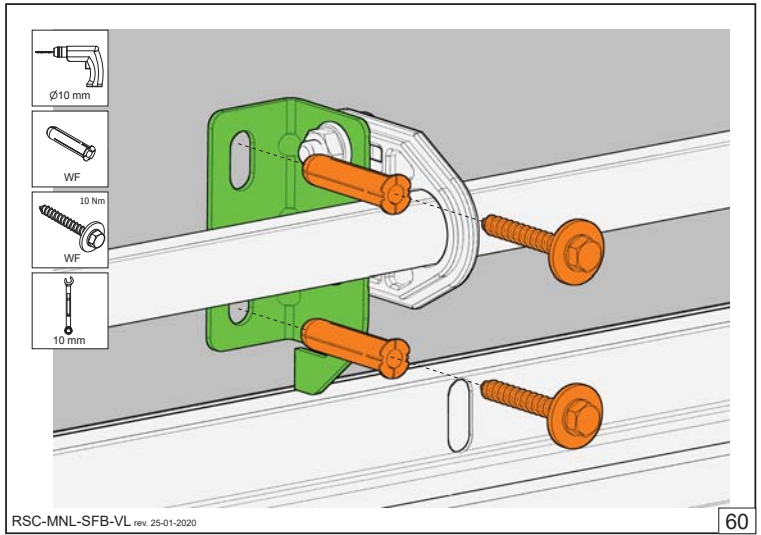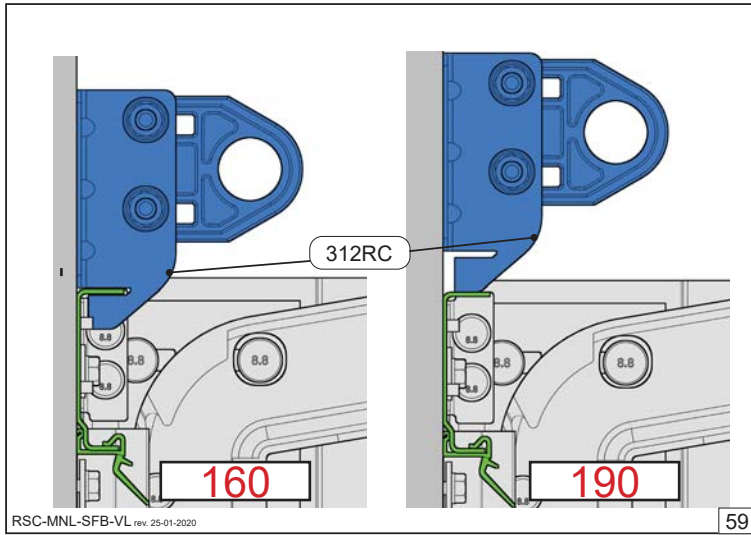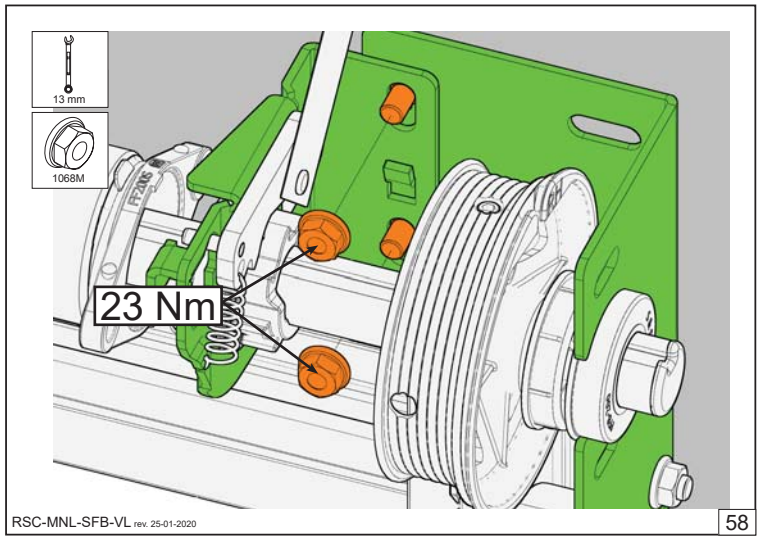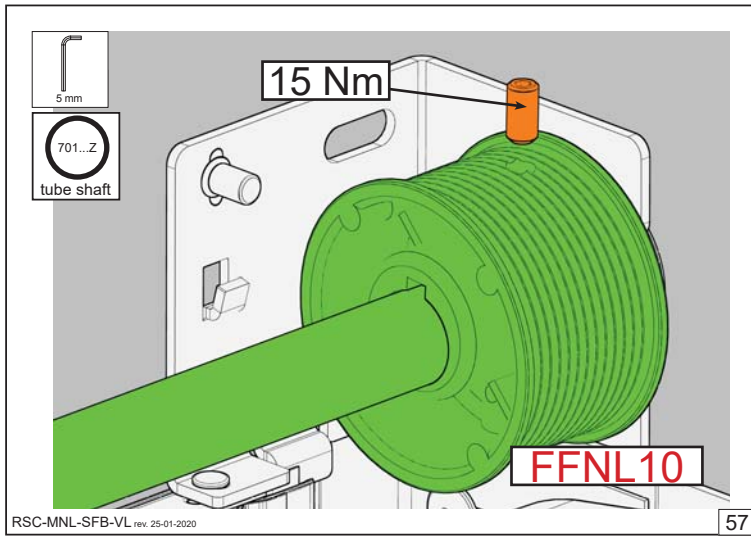

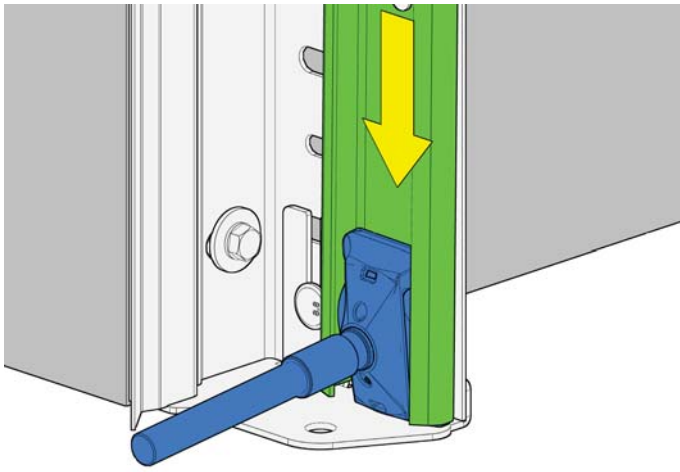


RSC-MNL-SFB-VL rev. 25-01-2020

65

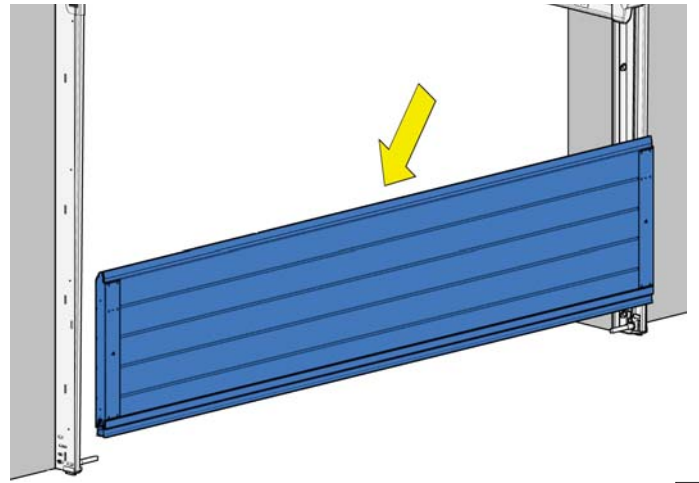


RSC-MNL-SFB-VL rev. 25-01-2020

66

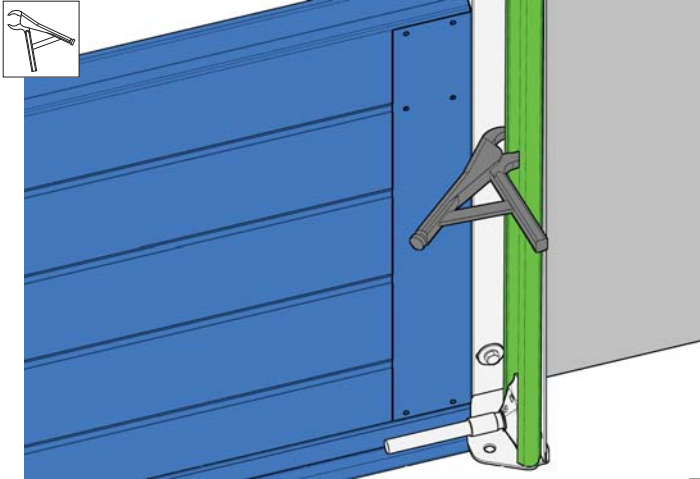


RSC-MNL-SFB-VL rev. 25-01-2020

67

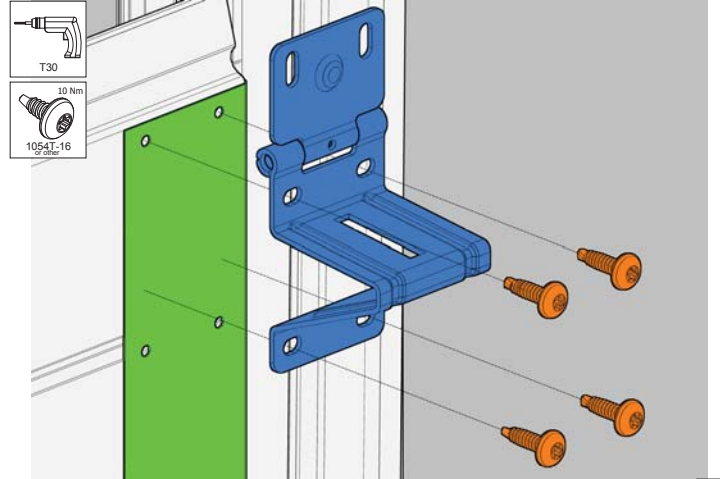


RSC-MNL-SFB-VL rev. 25-01-2020

68

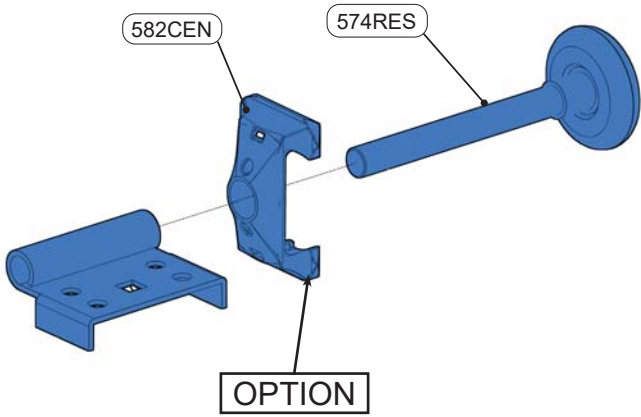


RSC-MNL-SFB-VL rev. 25-01-2020

69

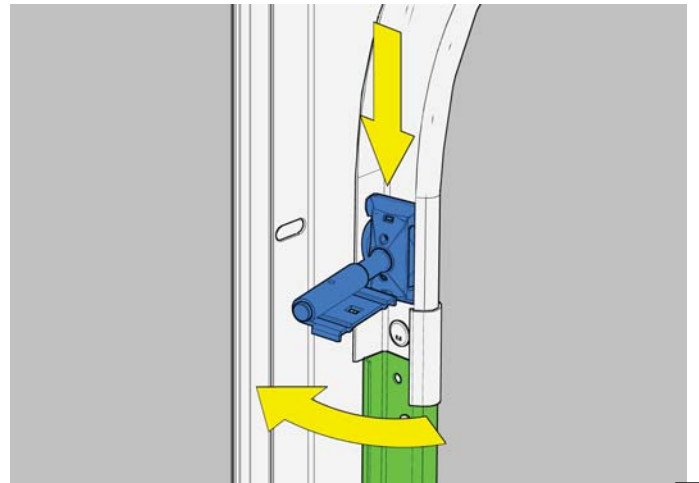


RSC-MNL-SFB-VL rev. 25-01-2020

70

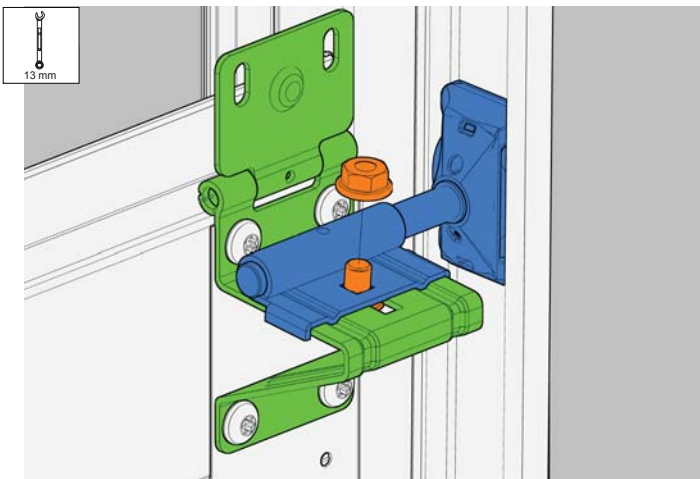


RSC-MNL-SFB-VL rev. 25-01-2020

71

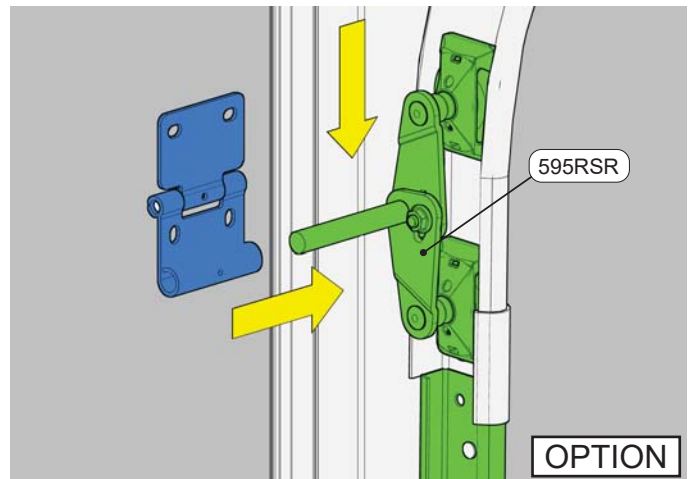


RSC-MNL-SFB-VL rev. 25-01-2020

72

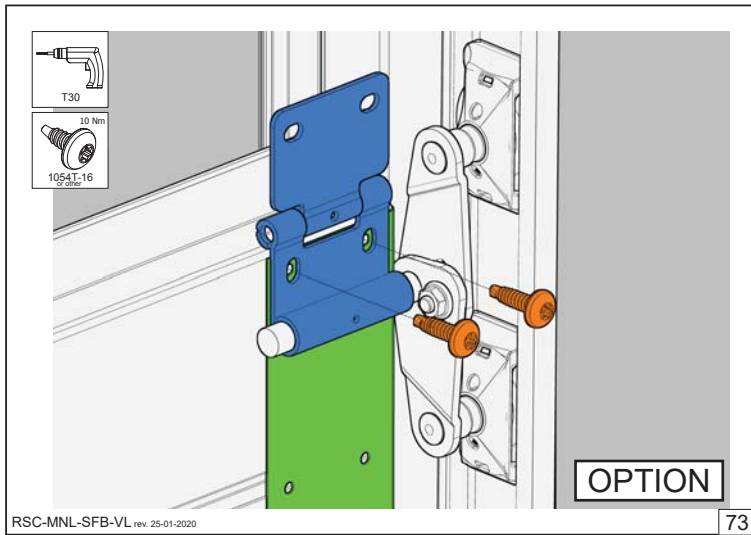


RSC-MNL-SFB-VL rev. 25-01-2020

73

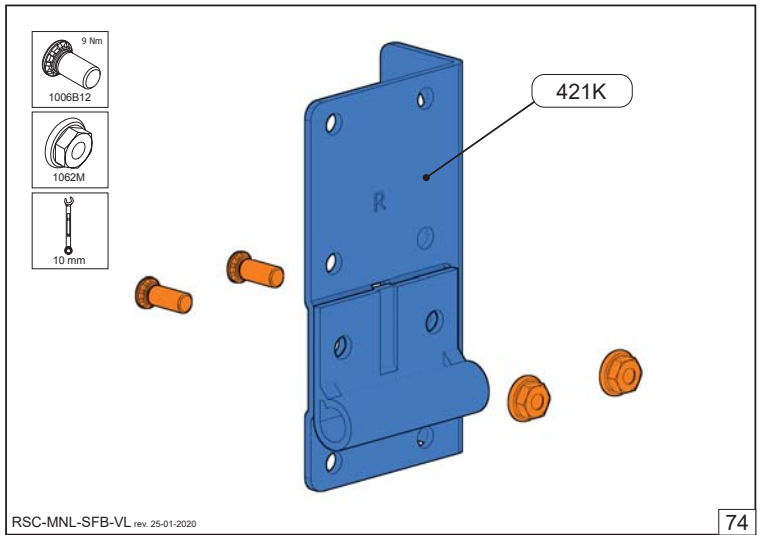


RSC-MNL-SFB-VL rev. 25-01-2020

74

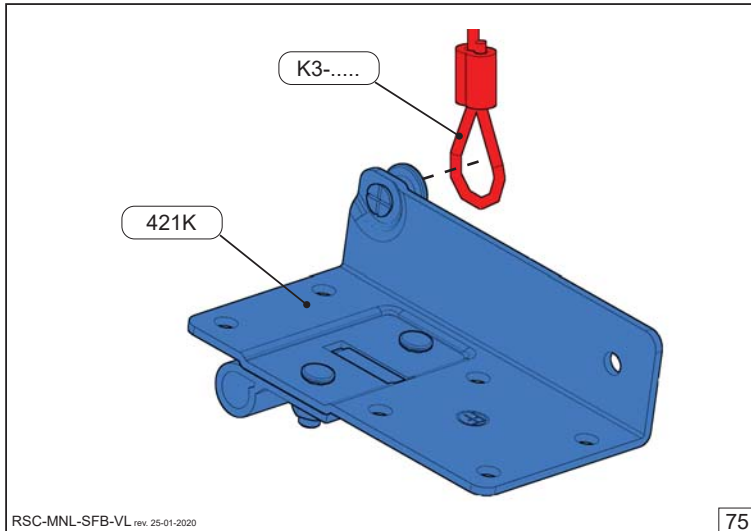


RSC-MNL-SFB-VL rev. 25-01-2020

75

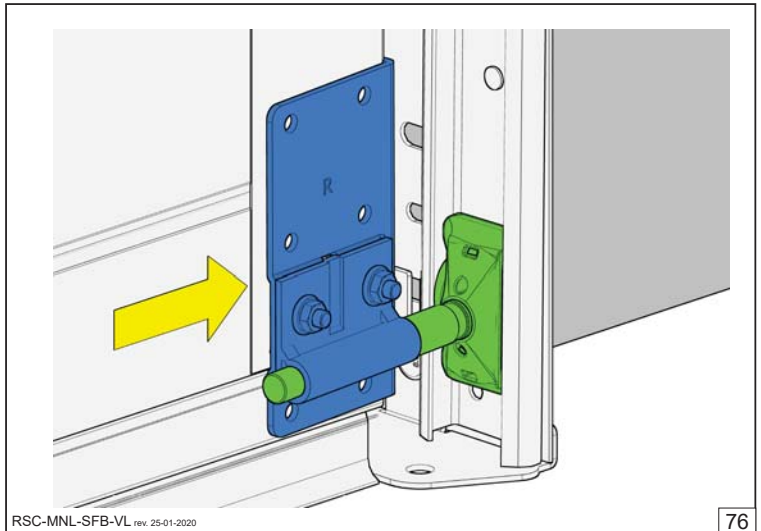


RSC-MNL-SFB-VL rev. 25-01-2020

76

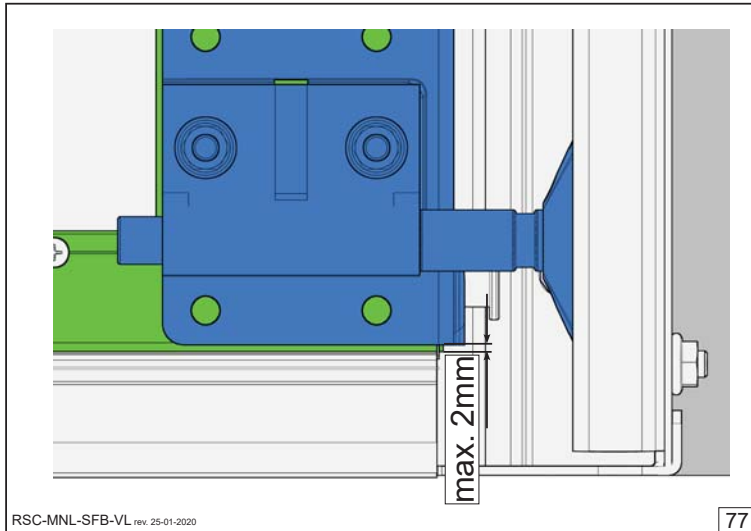


RSC-MNL-SFB-VL rev. 25-01-2020

77

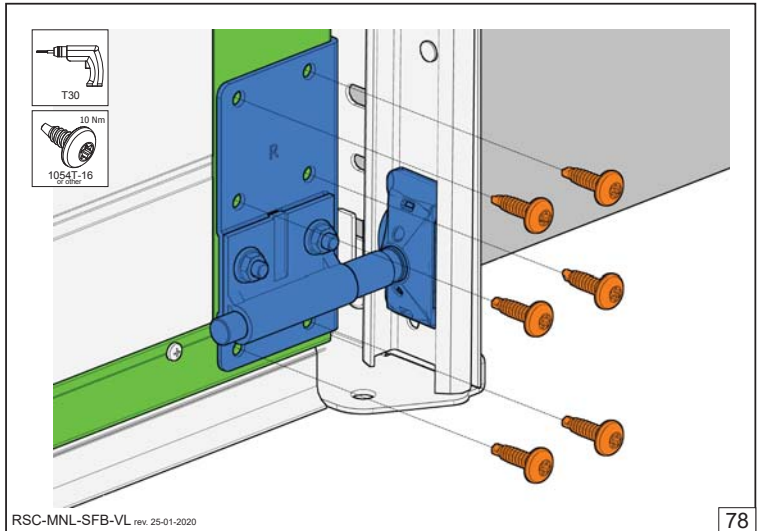


RSC-MNL-SFB-VL rev. 25-01-2020

78

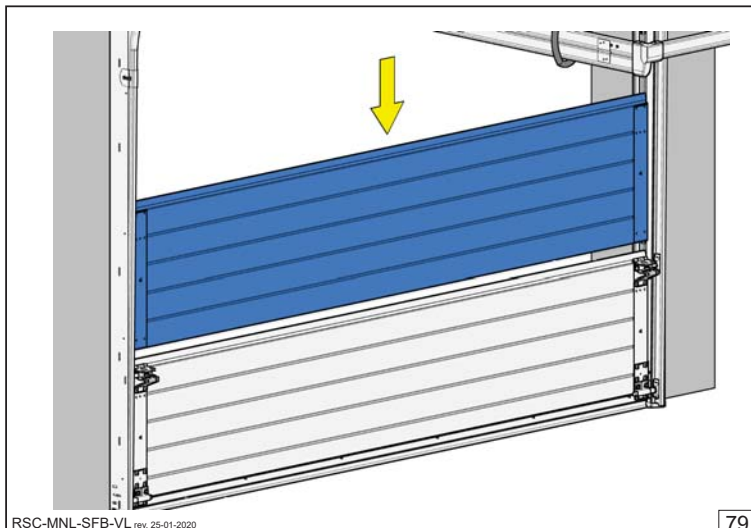


RSC-MNL-SFB-VL rev. 25-01-2020

79

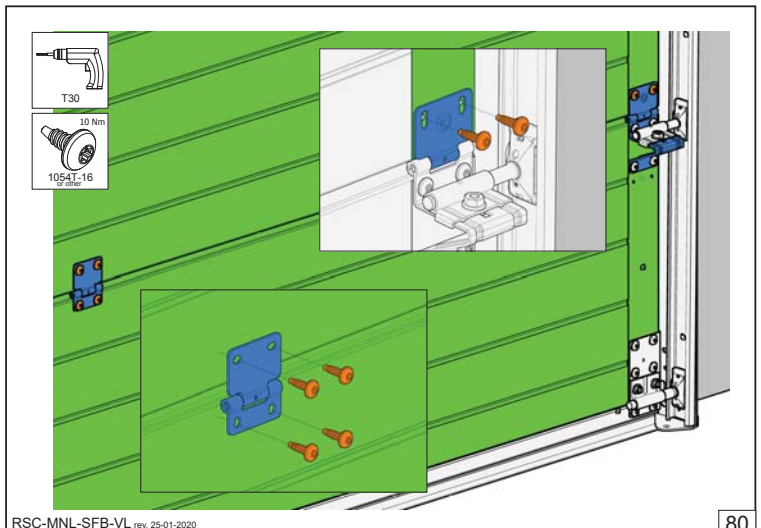


RSC-MNL-SFB-VL rev. 25-01-2020

80

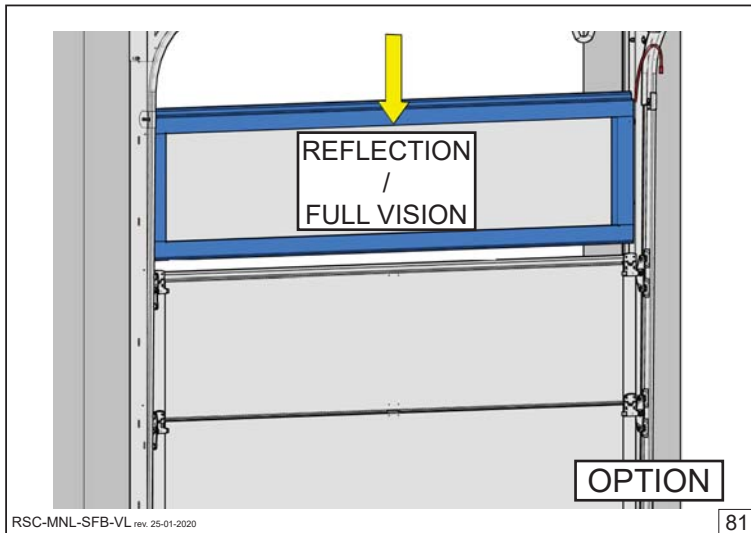


RSC-MNL-SFB-VL rev. 25-01-2020

81

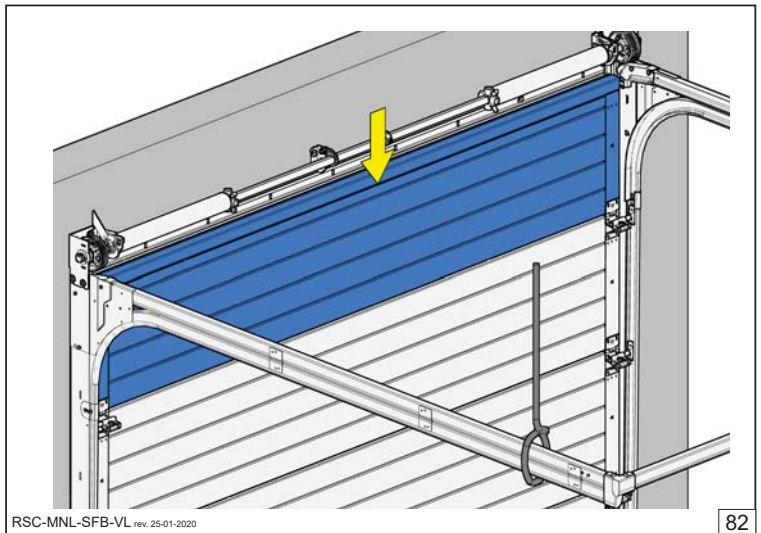


RSC-MNL-SFB-VL rev. 25-01-2020

82

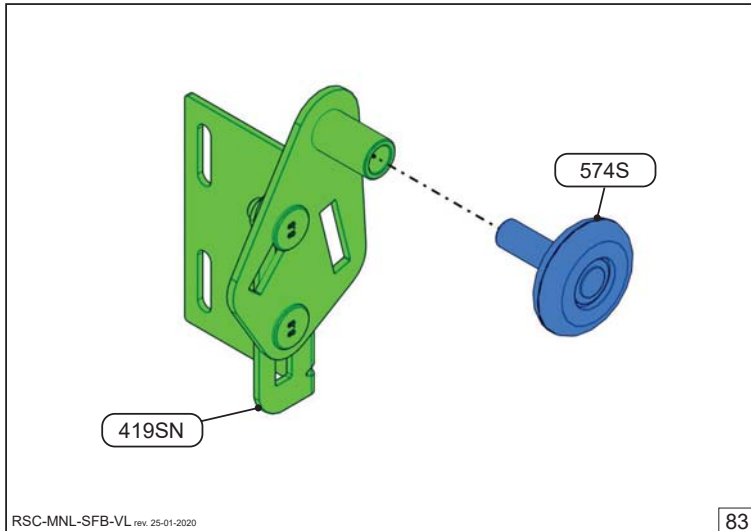


RSC-MNL-SFB-VL rev. 25-01-2020

83

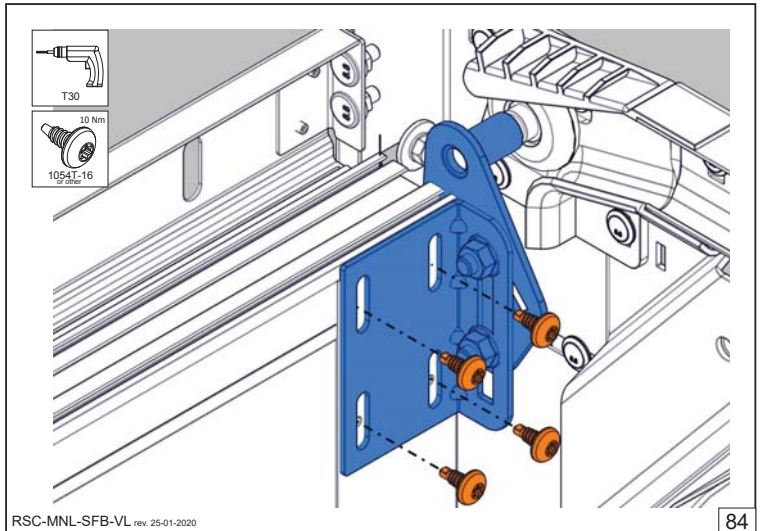


RSC-MNL-SFB-VL rev. 25-01-2020

84

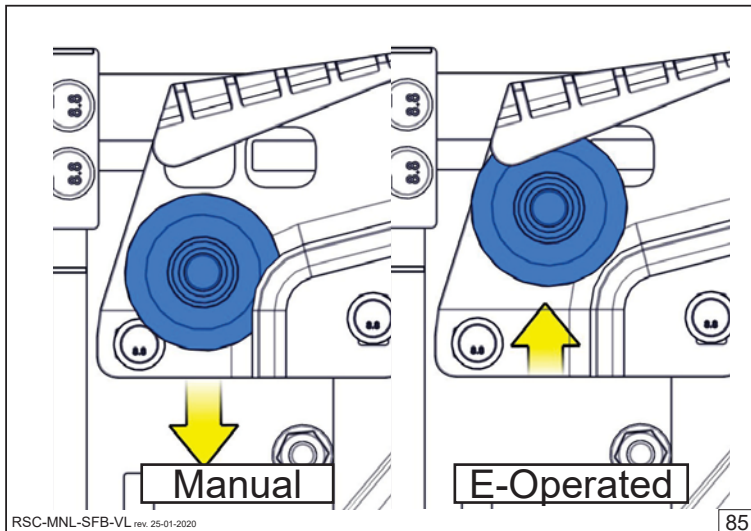


RSC-MNL-SFB-VL rev. 25-01-2020

85

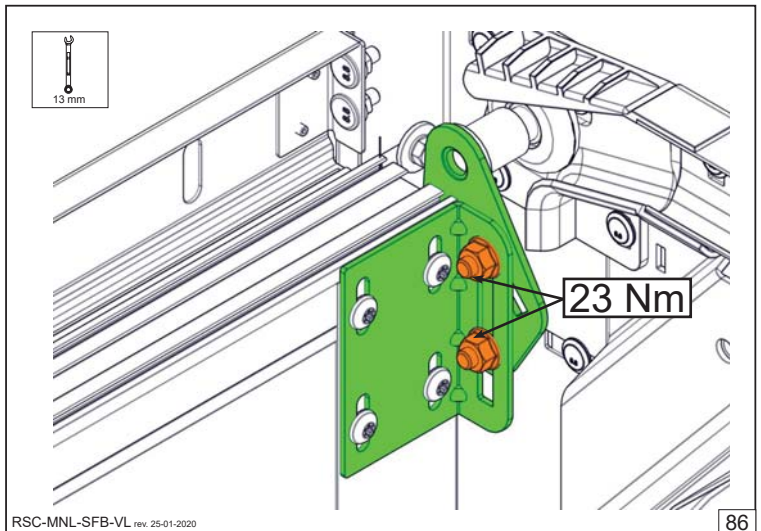


RSC-MNL-SFB-VL rev. 25-01-2020

86

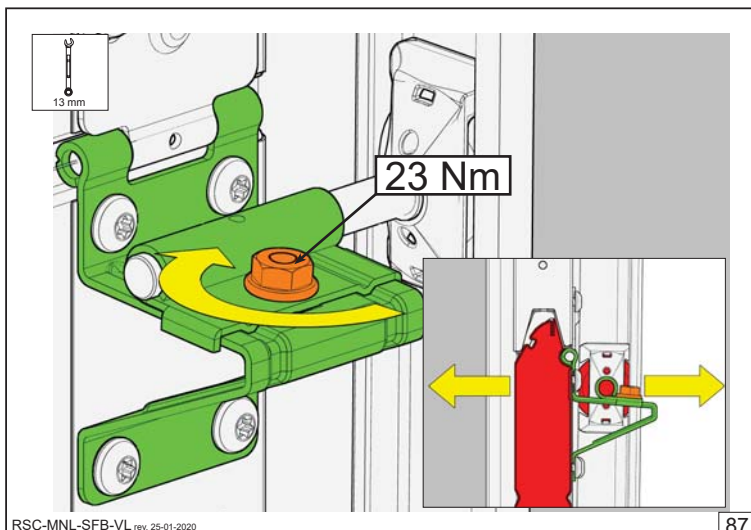


RSC-MNL-SFB-VL rev. 25-01-2020

87

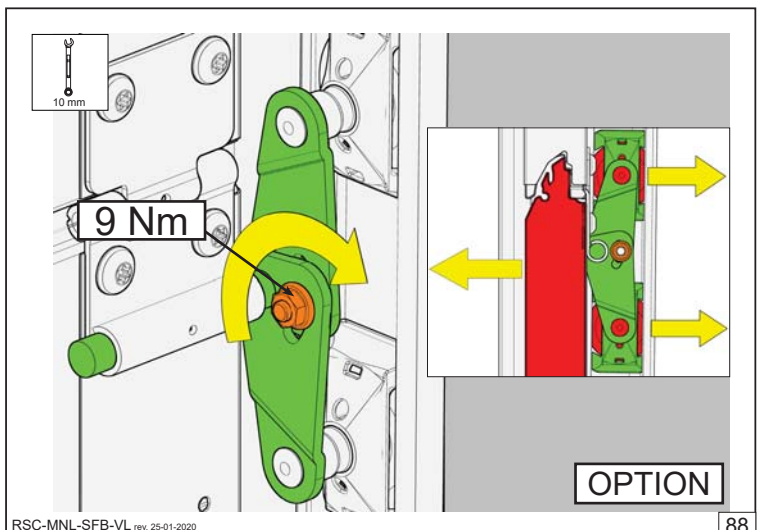


RSC-MNL-SFB-VL rev. 25-01-2020

88

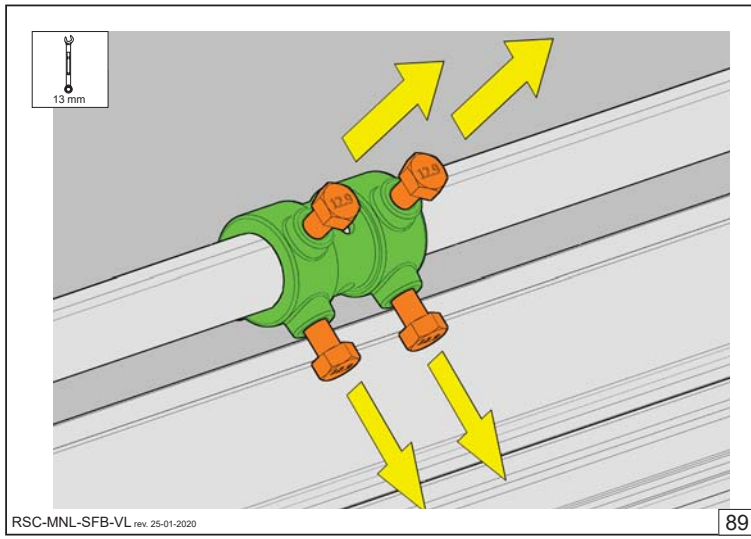


RSC-MNL-SFB-VL rev. 25-01-2020

89

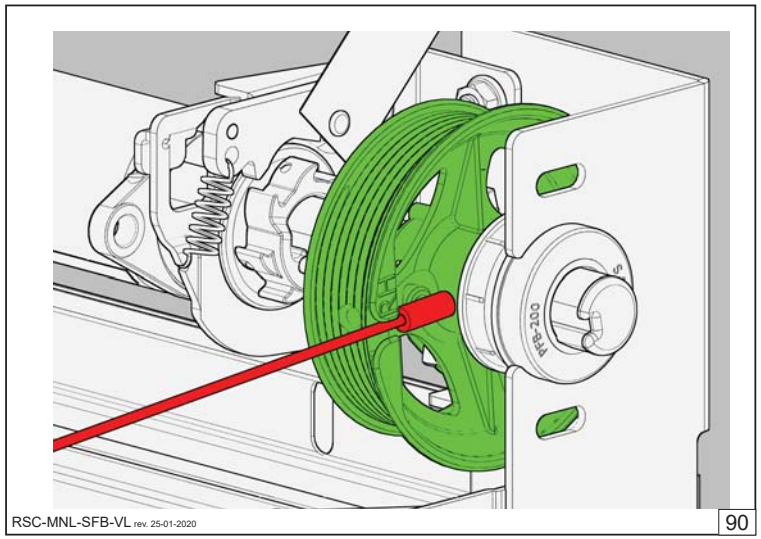


RSC-MNL-SFB-VL rev. 25-01-2020

90

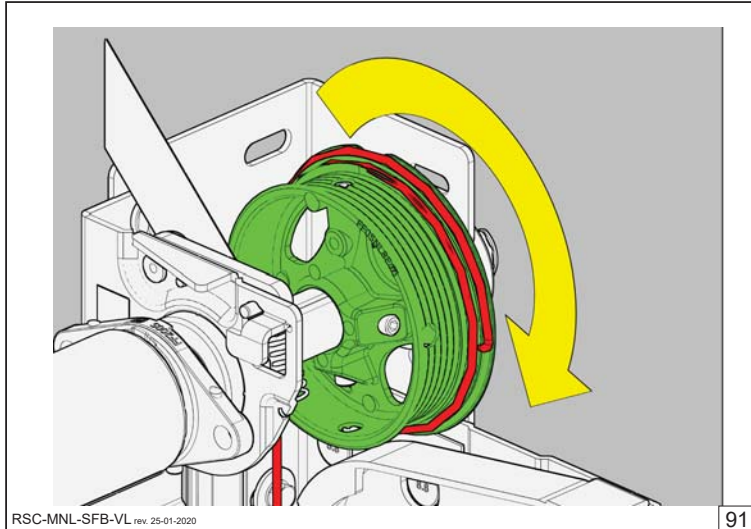


RSC-MNL-SFB-VL rev. 25-01-2020

91

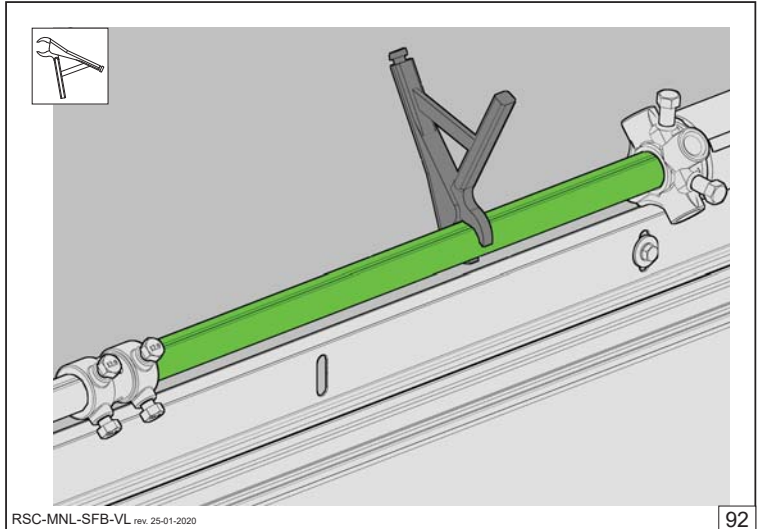


RSC-MNL-SFB-VL rev. 25-01-2020

92

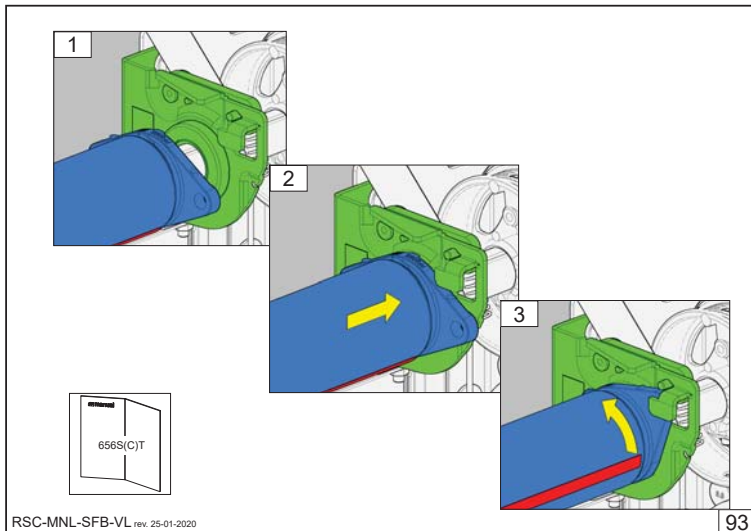


RSC-MNL-SFB-VL rev. 25-01-2020

93

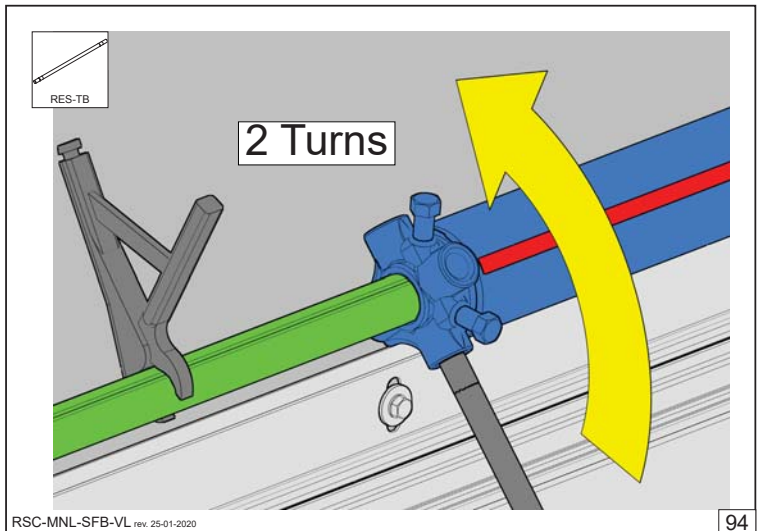


RSC-MNL-SFB-VL rev. 25-01-2020

94

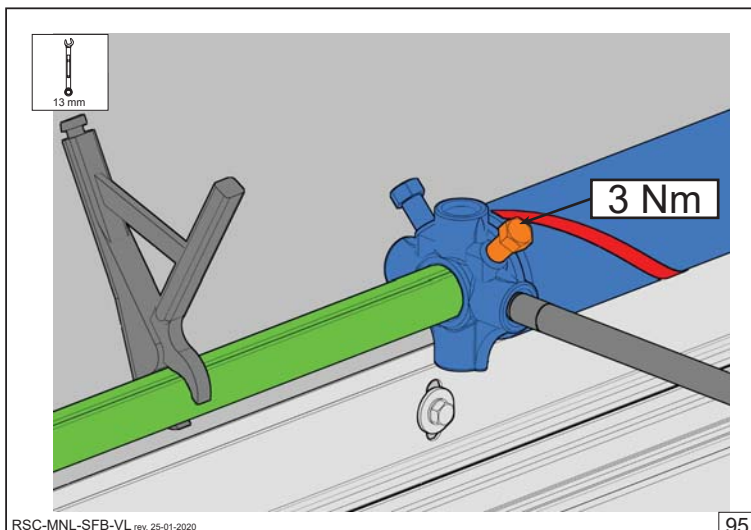









RSC-MNL-SFB-VL rev. 25-01-2020


95

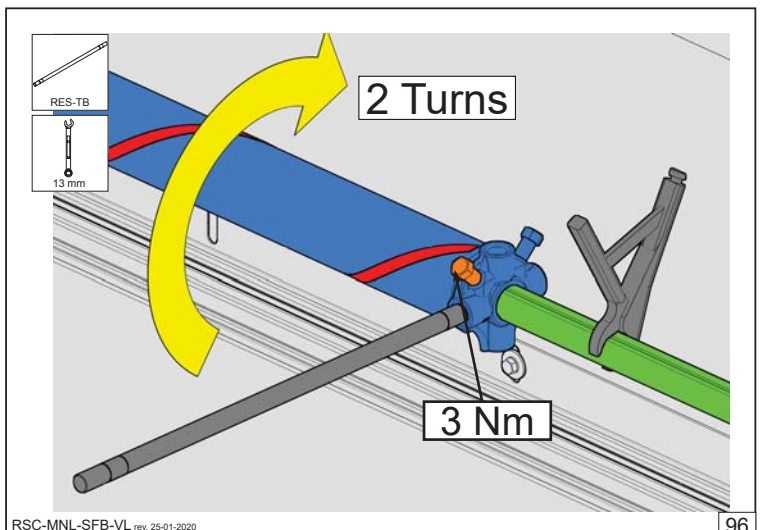


RSC-MNL-SFB-VL rev. 25-01-2020

96

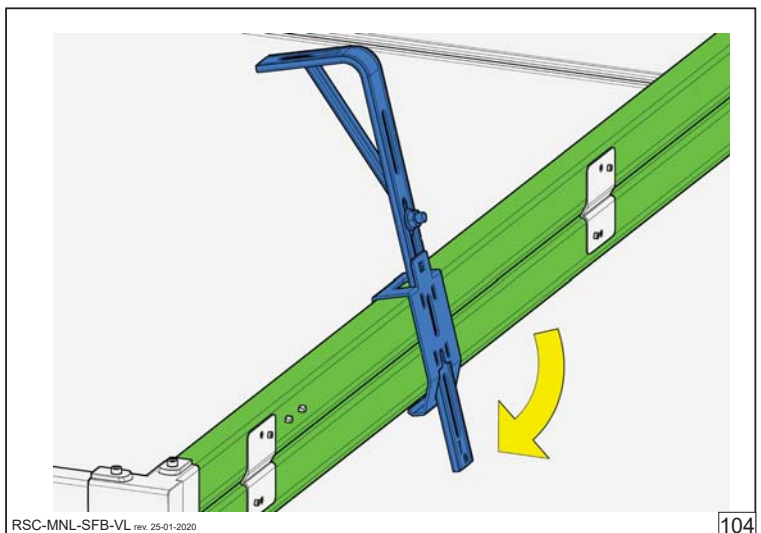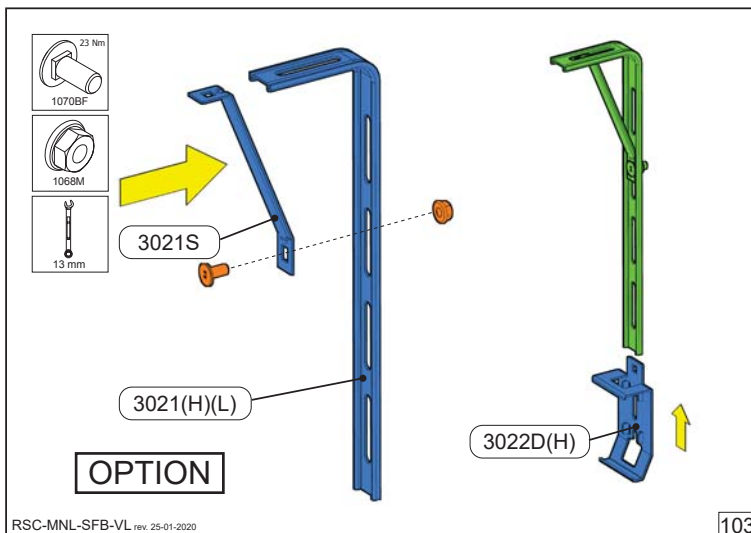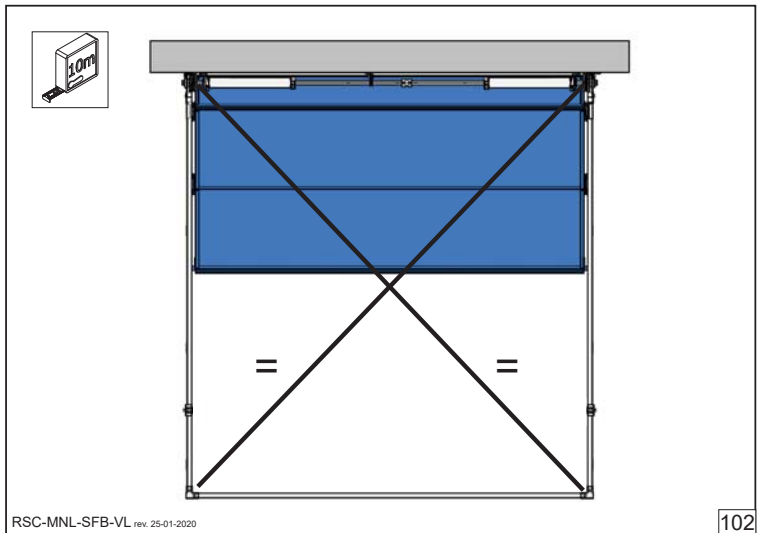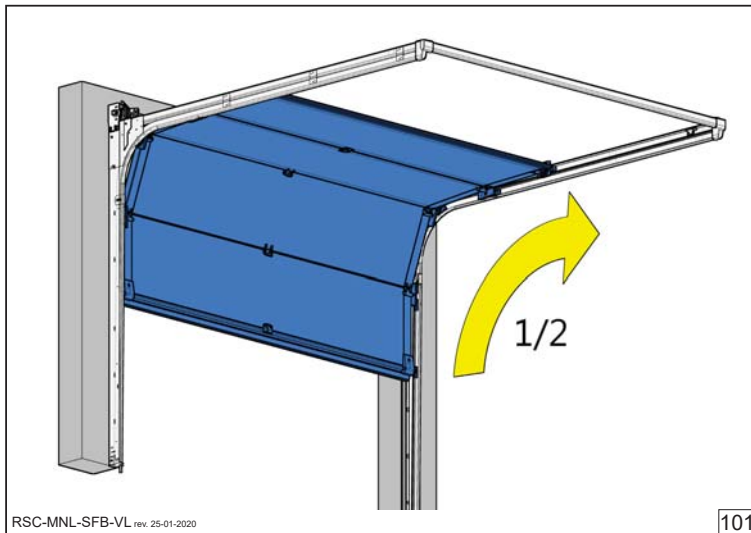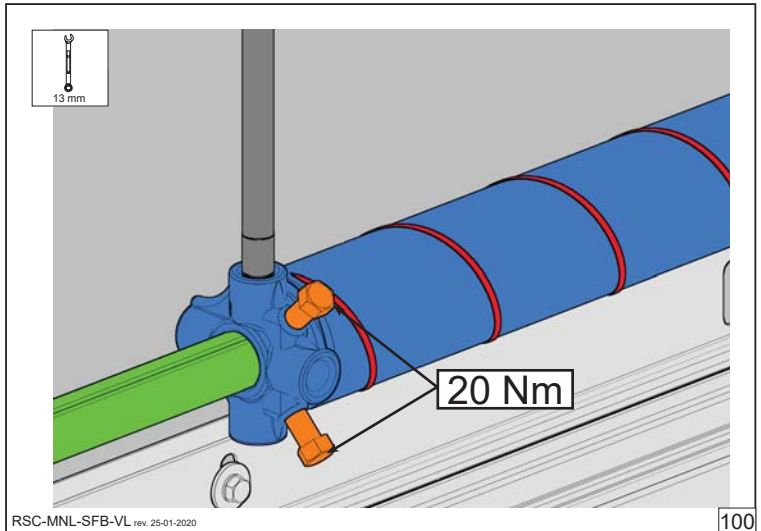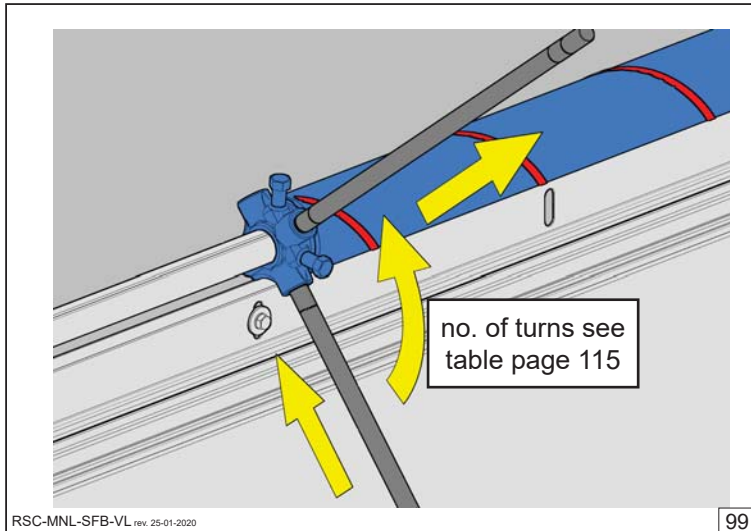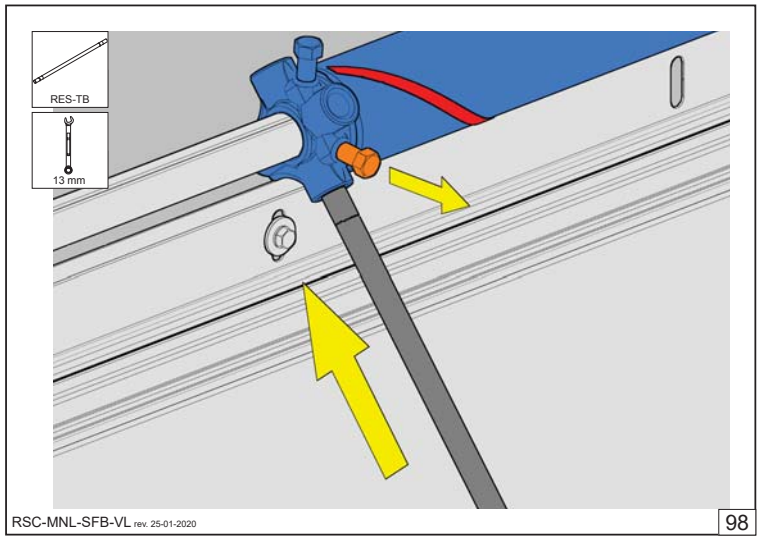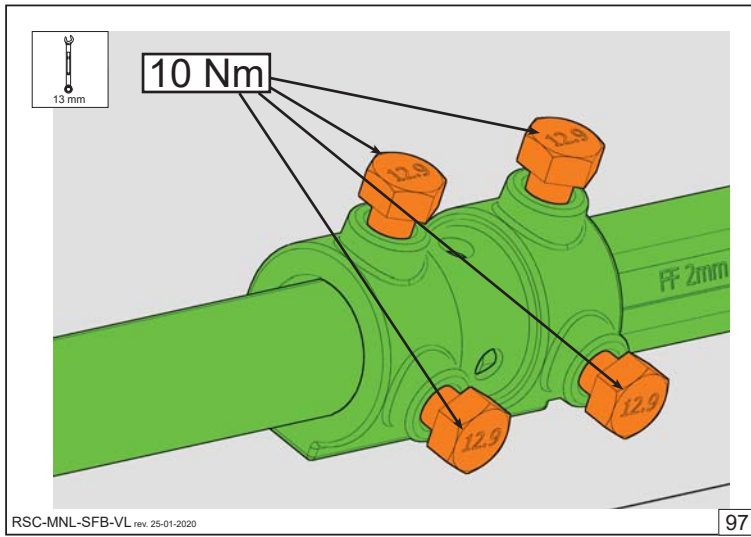


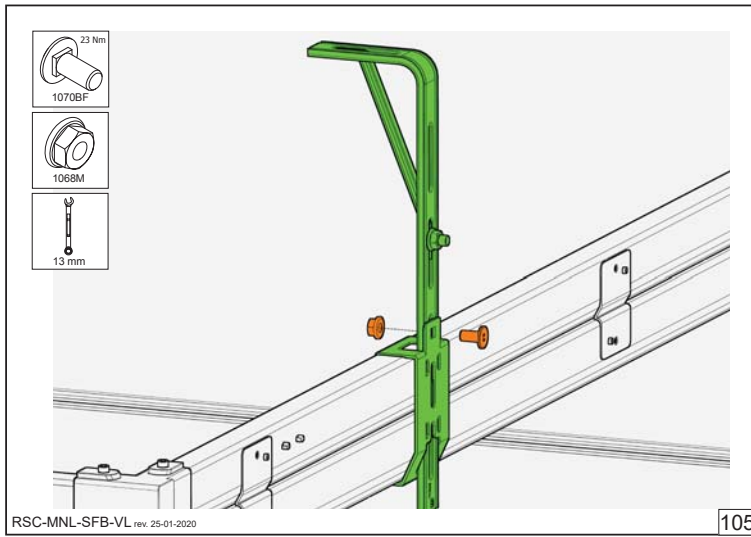


105

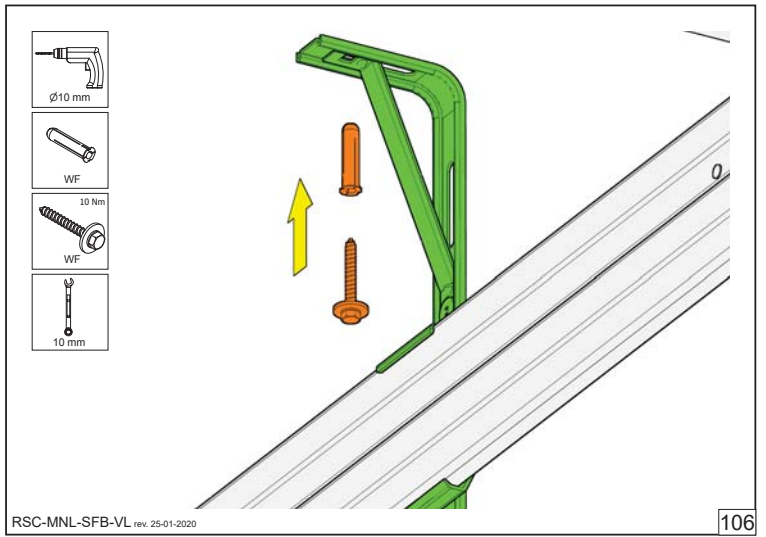


106

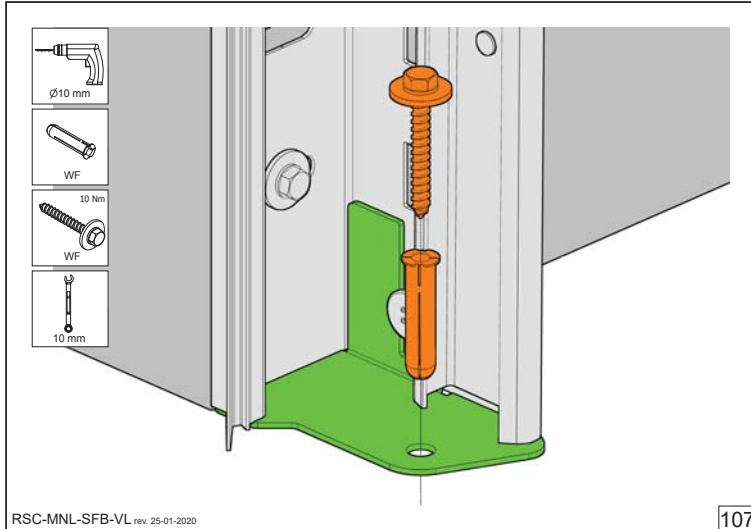


107

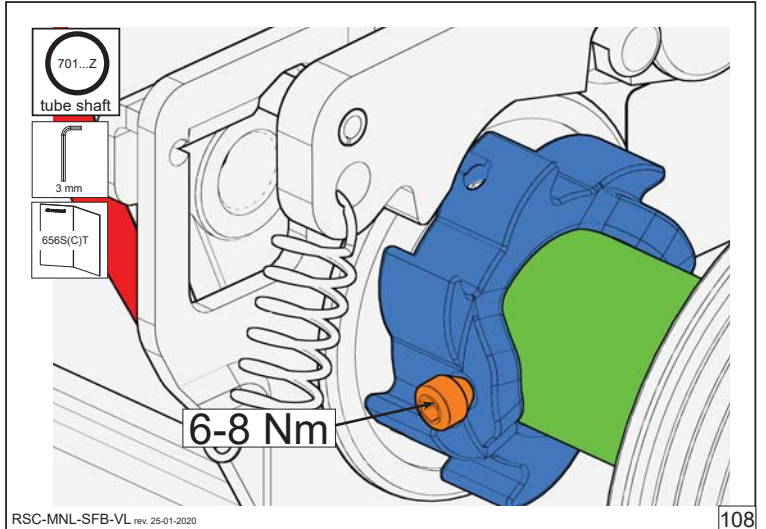


108

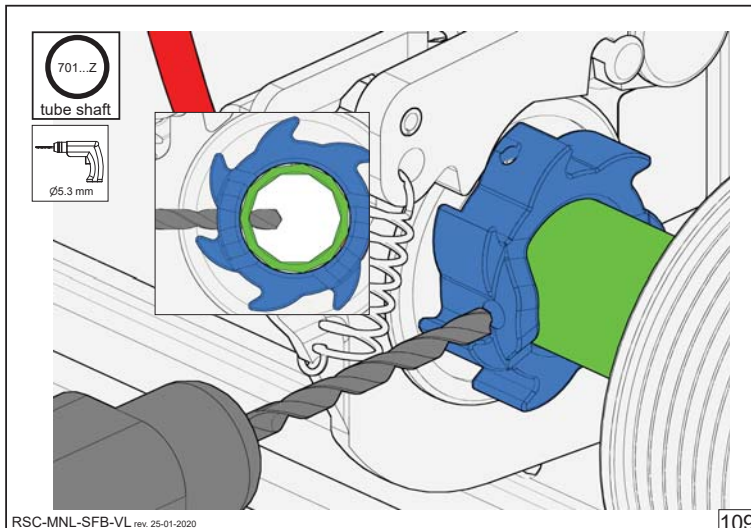


109

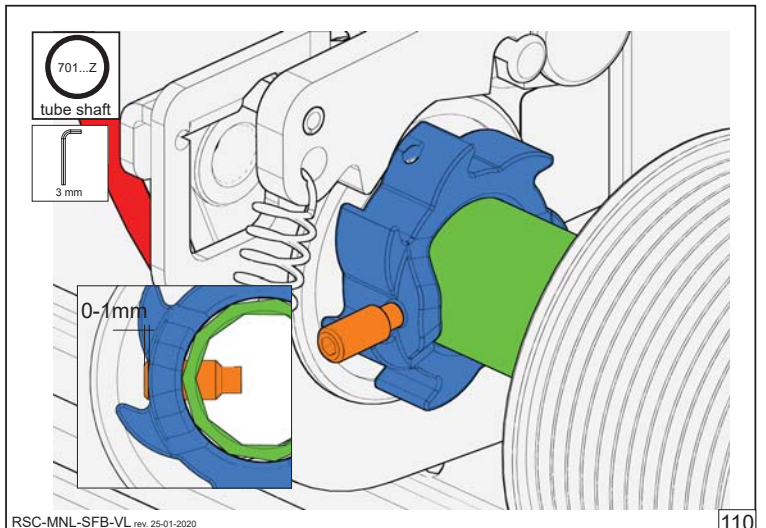


110

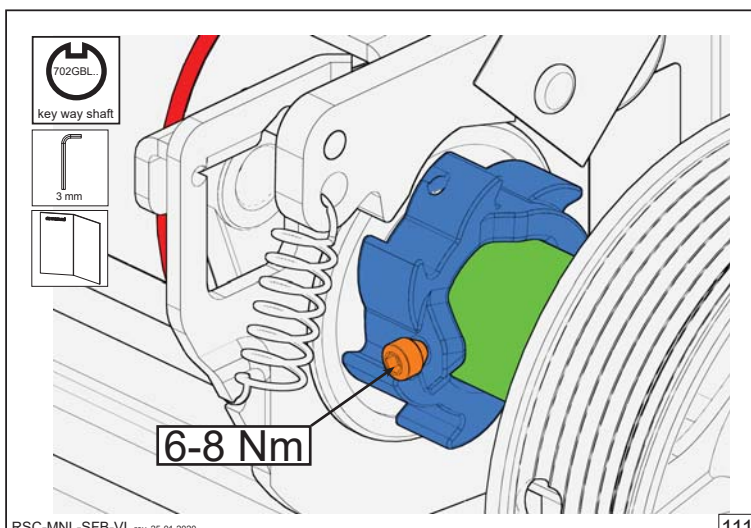


111

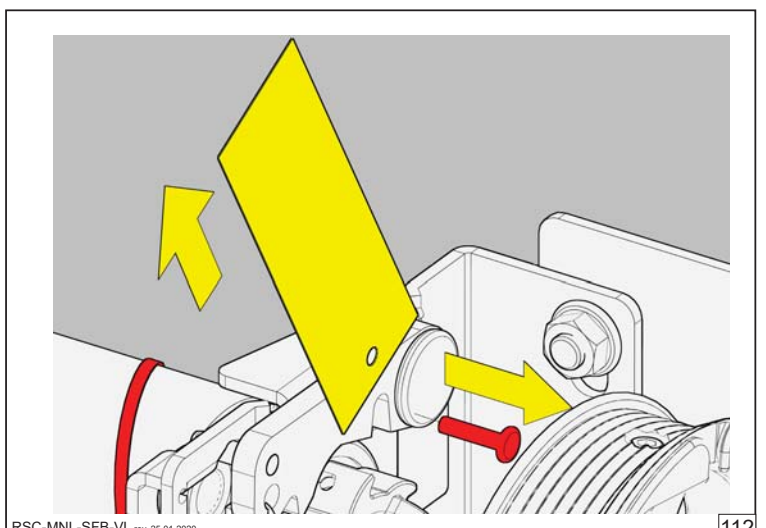


112

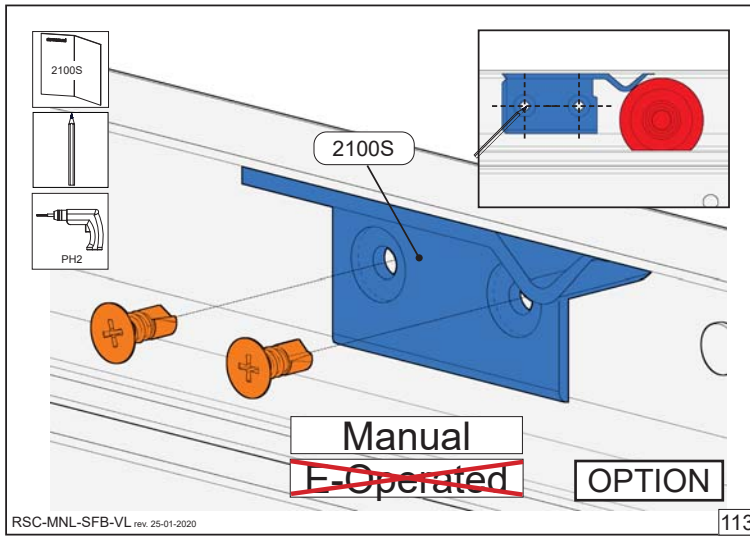

113

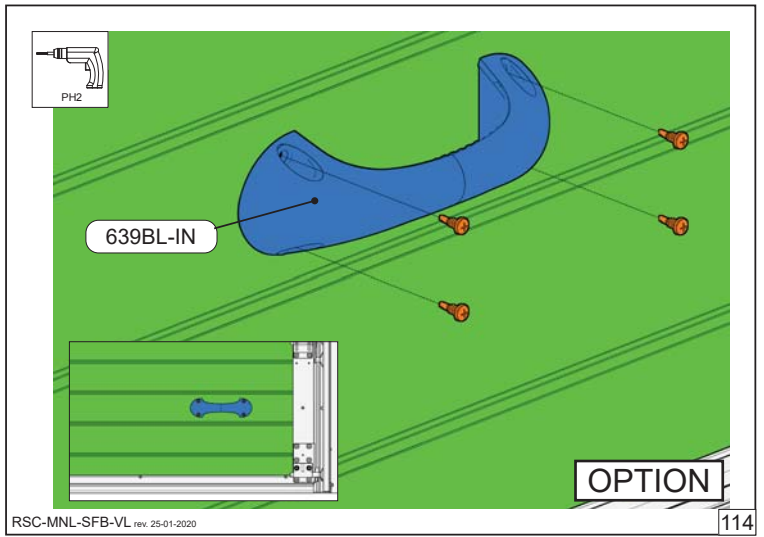


114

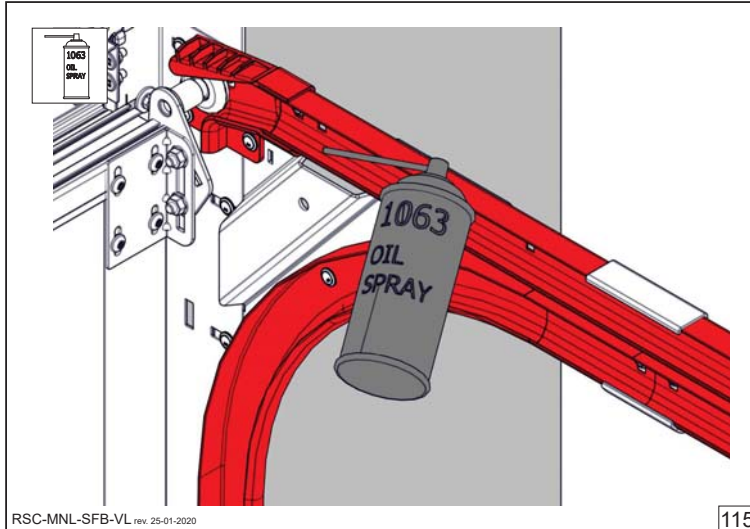


115



116

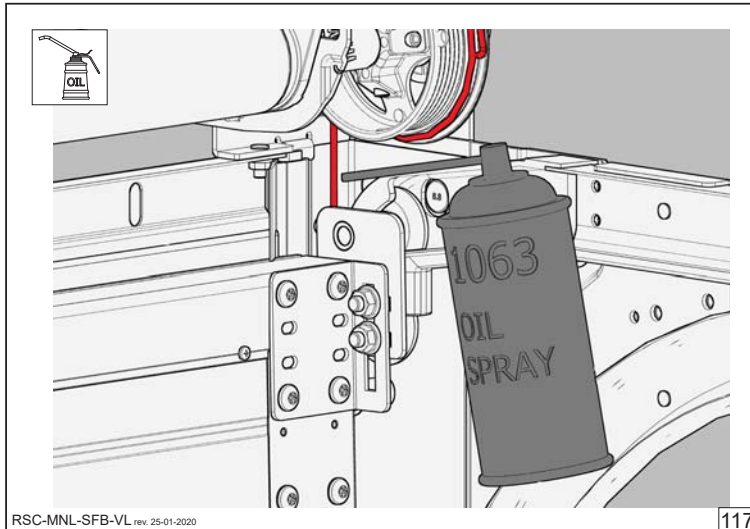

117

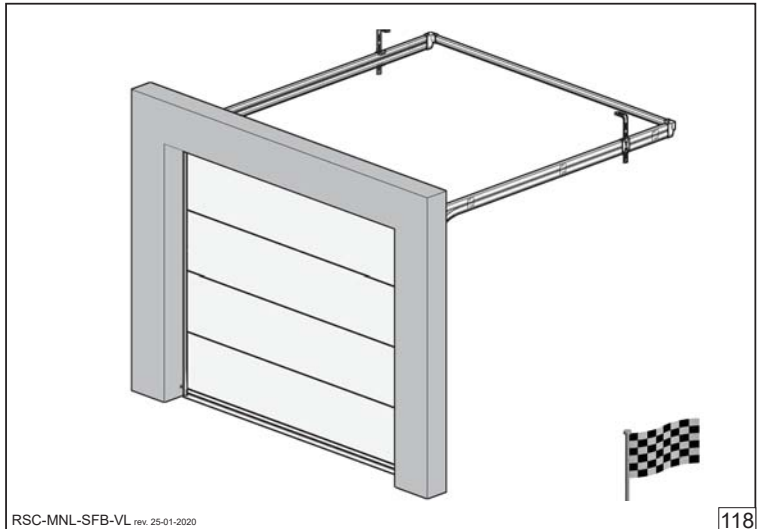

118

Spring Tensioning Table RSC

Doorheight	Drum		
	FF05NL8	FFNL10	FF05NL12
2000	7,1	9,7	7,1
2125	7,5	10,3	7,5
2250	8	10,9	8
2375	8,1	11	8,1
2500	8,6	11,6	8,6
2750	x	x	9,4
3000	x	x	10